



- 1 -Fuel Pump
- 2 -Throttle Body
- 3 -Distributor
- 4 -Coil
- 5 -Manifold Air Temperature Sensor (MAT)
- 6 -Data Link Connector (DLC)
- 7 -Manifold Absolute Pressure (MAP) Sensor
- 8 -Knock Sensor
- 9 -Idle Air Control (IAC)
- 10 -Throttle Position (TP) Sensor
- 11 -Engine Coolant Temperature (ECT) Sensor
- 12 -Electronic Control Module (ECM)
- 13 -Water Temperature Sender
- 14 -Fuel Pump Relay
- 15 -Ignition/Fuel System Relay
- 16 -Fuses (15 Amp) Fuel Pump, (15 Amp) ECM/DLC/Battery, (10 Amp) ECM/Injector/Ignition/Knock Module
- 17 -Oil Pressure Sensor
- 18 -Harness Connector To Starting/Charging Harness
- 19 - Positive (+) Power Wire To Engine Circuit Breaker
- 20 -Shift Plate
- 21 -Gear Lube Monitor
- 22 -Fuel Pressure Switch
- 23 -Water Temperature Sender
- 24 -Water Temperature Sender

19360

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	861159T 1	WIRING HARNESS	1	(350 MAG MPI & HORIZON)	