



1617

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	43	862914T 3	PUMP ASSEMBLY	1	(With Out Air Fittings)	1
1	46	862914T 4	PUMP ASSEMBLY	1	(With Air Fittings)	1
2	47	862232A 2	IMPELLER	1		
3	25	841807	O-RING, (3.500 x .103)	1		
4	26	862037	SEAL, Oil	1		
5		862235A 1	DRIVESHAFT ASSEMBLY	1		
6		862039	TOLERANCE RING	1		
7	26	862040	SEAL, Lip	1		
8	22	806608A 1	PLUG KIT, Blue	2		
9	25	32509	O-RING, (.489 x .070)	2		
10	10	40003 28	SCREW, (M6 x 16)	4		
11	10	40003 31	SCREW, (M6 x 30)	3		
12		863472T	BRACKET, Sea Water Pump	1		
13	10	40003 31	SCREW, (M6 x 30)	1		
14		862351T	PULLEY	1		
15	16	863853	STUD	2		
16	11	826711 12	NUT, (.375-16 )	2		
17	10	32132	SCREW, (.375-16 x 1.750)	1		
18	22	863718	FITTING, Gray - Straight, Male Air	1	(5/32) (Component Of T-4 Pump)	
19	22	863719	FITTING, Orange - Straight, Male A	1	(3/16) (Component Of T-4 Pump)	
20	13	35048	LOCKWASHER, (.375), Split lock	1		