



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		862031T	ALTERNATOR ASSEMBLY (65 Amp)	1	(Non Serviceable)	
2	11	40021	NUT (M6 x 1)	1		
3		807750T	BRACE	1		
4	10	98261	SCREW (3/8-16 x 3/4 in.)	1		
5	13	35048	LOCKWASHER (3/8 in.)	1		
6	10	40001134	SCREW	1		
7		862051T	BRACKET-Alternator/Power Steerir	1		
8		862058T	BRACE-Alternator	1		
9	16	860102	STUD	3		
10	10	31984	SCREW-( 3/8-24 X 3-1/8 In. )	2		
11	11	21908	NUT (3/8-24)	2		
12	12	57792	WASHER	2		
13		818380T	BUSHING	2		
14		807757T	PULLEY	2		
15	11	859135	NUT (7/16-20)	2		
16		807753T	BRACKET-Idler	1		
17	11	32219	NUT (3/8-16)	3		
18	10	816601	SCREW (7/16-20 x 1-1/2 in.)	1		