



- A - Audio Warning System**
 1 - Oil Pressure Switch
 2 - Transmission Fluid Temperature Switch
- B - Instrumentation System**
 1 - Oil Pressure Sender
 2 - Water Temperature Sender
- C - Charging And Starting System**
 1 - Alternator
 2 - Ground Stud
 3 - starter
 4 - Circuit Breaker
 5 - Starter Slave Solenoid
 6 - Neutral Safety Switch
- a - Harness Connector
 b - Positive (+) Power Wire to EFI Harness
 c - Auxiliary Tachometer Lead



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	808035A	2 WIRING HARNESS-ENGINE	1	(Use With Mando Alternator With I	
-	84	862179T	1 WIRING HARNESS-ENGINE	1	(Use With Delco Alternator With M	