



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		26079A 2	PLATE KIT	1		
2	10	15001	SCREW (#8-16 X 7/8 In.)	4		
3		807453T	BRACKET-Harness Mounting	1		
4	10	98261	SCREW (3/8-16 x 3/4 in.)	2		
5		805368T	BRACKET-Electrical	1		
6	88	806950	BREAKER-Circuit (50 Amp)	1		
7	10	68513	SCREW (#10-32 X 3/8 In.)	2		
8	13	26996	LOCKWASHER- #10	2		
9	10	57583	SCREW (#8-32 X 3/8 In.)	2		
10	89	96158T	SOLENOID-Starter	1		
11	13	26995	LOCKWASHER (#8)	2		
12	11	26419	NUT (#8-32)	2		
13	10	805564	SCREW-(1/4-20)	2		
14	16	805459	STUD	1		
15	13	26992	LOCKWASHER (1/4 In.)	2		
16	11	94330	NUT (1/4-20)	2		
17	85	97861	INSULATOR-Starter Solenoid	1		
18		861714T	BRACKET-ECM Mounting	1		
19	12	35462	WASHER	3		
20	11	64015	NUT	3		
21	10	28636	SCREW	3		
22	54	804351	CLIP-Relay Mounting	2		
23	54	804352	CLIP-Fuse Block Mounting	1		
24		807057T	RELAY	2		
25	88	804638	FUSE-10 Amp Micro	2		
26		861927T 3	MODULE ASSEMBLY-ECM	1		
27		861881	BRACKET-Electrical Mounting	1		
28	10	73286	SCREW-(1/4-20 X 1/2 In.)	1		
29	84	862021T 1	HARNESS-Transmission Temperat	1		
30	84	861940T 1	HARNESS-Neutral Safty Switch	1		
31		805592A 1	CONNECTOR-Jumper	1		