



18342

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	46	862914T10	SEAPUMP KIT	1	(Without Air Fittings)	
-	46	862914T11	SEAPUMP KIT	1	(With Air Fittings)	
1	46	862914A13	HOUSING ASSEMBLY, Impeller	1		
2	47	862232A 2	IMPELLER	1		
3	25	841807	O-RING, (3.500 x .103) (Also i	1		
4	26	862037	SEAL, Oil	1		
5		862235A 1	DRIVESHAFT ASSEMBLY	1		
6		862039	TOLERANCE RING	1		
7	26	862040	SEAL, Lip	1		
8		863674A05	COVER KIT, Impeller Housing	1	(With Air Fittings)	
9		862776A01	COVER KIT, Impeller Housing	1	(Without Air Fittings)	
10	22	<a href="#">806608A 1</a>	PLUG KIT, Blue	2		
11	25	32509	O-RING, (.489 x .070)	2		
12	10	40003 28	SCREW, (M6 x 16)	4		
13	22	863718	FITTING, Gray - Straight, Male Air	1	(.1562)(Component of 46-862914T	
14	22	863719	FITTING, Orange - Straight, Male	1	(.1875)(Component of 46-862914T	
15	10	40003 31	SCREW, (M6 x 30)	2		
16		865143T	BRACKET, Sea Water Pump	1		
17	10	40003 31	SCREW, (M6 x 30)	1		
18		862351T	PULLEY	1		
19	16	863853	STUD	2		
20	11	826711 12	NUT, (.375-16 )	2		
21	10	32132	SCREW, (.375-16 x 1.750)	1		
22	13	35048	LOCKWASHER, (.375)	1		