



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A27	DISTRIBUTOR	1		2
1		805185A26	DISTRIBUTOR	1		5
2		805759A 2	CAP	1		
3	10	90926	SCREW	4		
4	27	805760	GASKET	1		
5		13524A 1	ROTOR/SENSOR WHEEL	1		
6	87	91019A 3	SENSOR ASSEMBLY	1		2
7	13	26996	LOCKWASHER	2		2
8	11	68219	NUT	2		2
9	87	91019A 6	SENSOR ASSEMBLY	1		5
10	10	66686	SCREW (1")	1		
10	10	72202	SCREW (1-1/4")	1		
11	43	818807	DRIVE GEAR	1		
12	17	47617	PIN	1		
13	23	90915	BUSHING	2		
14	12	90931	WASHER	1		
15	27	34486 3	GASKET	1		4
16		52185	CLAMP	1		
17	10	12244	SCREW	1		
18	84	816761A 4	SPARK PLUG WIRE KIT	1		2
18	84	816761A17	SPARK PLUG WIRE KIT	1		5
19	85	63709A 1	BOOT ASSEMBLY	8		
20	33	59571	SPARK PLUG	8		
21		54676	RETAINER (2 WIRE)	2		
22		32783	RETAINER (3 WIRE)	2		
23	392	805570A 2	IGNITION COIL	1		
24		77294T	BRACKET	1		2
24		65970T 1	BRACKET	1		5
25	10	41408	SCREW (1-1/2")	1		
26	13	26996	LOCKWASHER	2		
27	11	68219	NUT	2		
28	10	824941	SCREW	2	(5/16-18 X 3/4 IN.)	2
28	10	98261	SCREW	1	(3/8-16 X 3/4 IN.)	5
29	13	39107	LOCKWASHER	2		
30	12	20553	WASHER	2		
31	16	90096A 1	STUD ASSEMBLY	2		
32	54	72821	RETAINER	2		
-	27	806871A96	GASKET SET-OVERHAUL	1		