



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		97401A 8	FUEL PUMP	1		
2	27	34213	GASKET	1		4
3	10	34354	SCREW (1-1/2")	2		
4	13	35048	LOCKWASHER	2		
5		35373	MOUNTING PLATE	1		
6	27	34898	GASKET	1		4
7	10	35366	SCREW	2		
8		821150	PUSH ROD	1		
9		89876A 3	BASE ASSEMBLY (1	SEE NOTE)	
10	22	816133 1	FITTING	1		
11	22	32561	PIPE PLUG	2		
12	35	807172	FUEL FILTER/WATER SEPARATI	1		
13	22	33821	ELBOW	3		
14	32	73815 67	HOSE	1		
15	32	821147T	FUEL LINE	1		
16		88641	MOUNTING BRACKET	1		6
17	11	35814	NUT	2		6
18	32	97326T	FUEL LINE	1		6
19		805367T	BRACKET	1		6
20	10	37612	SCREW	1		6
21	13	35048	LOCKWASHER	1		6
22	23	91034	SPACER	1		6
23	10	26486	SCREW	1		6
24	13	35048	LOCKWASHER	1		6
25	12	20553	WASHER	1		6
26	23	15895	SPACER	1		6
.	27	806871A96	GASKET SET-OVERHAUL	1		