



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	806967A	2 HARNESS-WIRING	1		
2	22	805328	1 ELBOW-90 DEG. (1/8 IN.)	1		
3		815425	1 SENDER-OIL PRESSURE	1		
3		37293	1 SENDER-OIL PRESSURE	OPT	(DUAL)	4
4		97257A	1 SENDER-WATER TEMPERATUR	1		
4		49734A	1 SENDER-WATER TEMPERATUR	OPT	(DUAL)	4
5	13	26996	2 LOCKWASHER (#10)	2		
6	11	68219	2 NUT (#10-32)	2		
7	87	806951	1 SWITCH-WATER TEMPERATURE	1	AUDIO WARNING SYSTEM	
8	22	48556	1 BUSHING-REDUCER	1	AUDIO WARNING SYSTEM	
9	87	805605A	1 SWITCH-OIL PRESSURE	1	AUDIO WARNING SYSTEM	
10		816492A	6 ALARM KIT	1	AUDIO WARNING SYSTEM	
11		805368T	1 BRACKET-MOUNTING	1		
12	88	806950	1 BREAKER-CIRCUIT (50 AMP)	1		
13	10	68513	2 SCREW (#10-32 X 3/8 IN.)	2		
14	13	26996	2 LOCKWASHER (#10)	2		
15	10	57583	2 SCREW (#8-32 X 3/8 IN.)	2		
16	89	96158	1 SOLENOID-STARTER	1		
17	10	805564	3 SCREW (1/4-20)	3		
18	13	26992	2 LOCKWASHER (1/4 IN.)	2		
19	11	94330	2 NUT (1/4-20)	2		
20	13	26996	2 LOCKWASHER (#10)	2		
21	11	68219	2 NUT (10-32)	2		
22	85	97861	1 INSULATOR-STARTER SOLENOI	1		
23		807763T	1 BRACKET	1		
24	10	806835	2 SCREW (#10-32 X 1/2 IN.)	2		
25		806958T	6 MODULE-IGNITION CONTROL	1		
26	10	806826	2 SCREW (#8-32 X 1/4 IN.)	2		
27		806611T	1 MODULE-KNOCK CONTROL	1		
28	10	806827	2 SCREW (#8-32 X 3/8 IN.)	2		
29		806612T	1 SENSOR-KNOCK	1		
30	22	806705	1 FITTING-Y	1		