



IMPORTANT

THE ONLY WALTER TRANSMISSION PARTS AVAILABLE FROM MERCURY MARINE ARE THOSE LISTED ON THIS PAGE. IF OTHER WALTER PARTS ARE REQUIRED, THEY MUST BE OBTAINED FROM AN AUTHORIZED WALTER DEALER. FOR REPLACEMENT PARTS, INFORMATION, WARRANTY INFORMATION OR SERVICE MANUALS, PLEASE HAVE AVAILABLE THE SERIAL NUMBER OF YOUR V-DRIVE AND CONTACT:

THE WALTER MACHINE COMPANY, INC.
 84 - 98 CAMBRIDGE AVENUE
 JERSEY CITY, NJ 07307
 TEL: 201-656-5654 FAX: 201-656-0318

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		860361A	TRANSMISSION ASSEMBLY	1	(1.00:1 RATIO)	
1		860362A	TRANSMISSION ASSEMBLY	1	(1.46:1 RATIO)	
2		860308A	HOUSING ASSEMBLY-ADAPTOR	1		
3	11	86226	NUT (3/8-16)	6		
4	13	35048	LOCKWASHER (3/8 IN.)	6		
5	10	28636	SCREW (1/4-20 X 3/4 IN.)	2		
6	13	26992	LOCKWASHER (1/4 IN.)	2		
7	22	860378	ELBOW (90 DEGREE)	2		
8	22	860379	FITTING-BARB	2		
9	32	17435 79	HOSE (TO SEA WATER PUMP)	1		
10	54	815504222	CLAMP-HOSE	2		