



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1347	5326A 2	CARBURETOR ASSEMBLY, COM	1	
1	1397	5637	AIR HORN ASSEMBLY	1	
2	1397	5640	LEVER, AIR VALVE LOCKOUT	1	
3	1397	3313	HOLDER KIT, SECONDARY ME	1	
4	1397	5639	METERING ROD, SECONDARY	2	
5	10	48137	SCREW, AIR HORN TO FLOAT	2	
6	10	34370	SCREW, AIR HORN TO FLOAT	5	
7	10	48395	SCREW, AIR HORN TO FLOAT	2	
8	1397	5638	LEVER, ACTUATING - PUMP	1	
9			ROLL PIN, HINGE - PUMP LEVE	1	4,3
10			PUMP ASSEMBLY	1	4,3
11			SPRING, PUMP RETURN	1	4
12			NEEDLE AND SEAT ASSEMBLY	1	4,3
13			GASKET, NEEDLE AND SEAT	1	0,4,3
14			PULL CLIP, FLOAT NEEDLE	1	4
15			GASKET, AIR HORN	1	0,4,3
16			METERING ROD, PRIMARY	2	4
17			JET, PRIMARY	2	4
18	1397	4326	CHOKE SHAFT AND LEVER AS:	1	
19	1397	4587	VALVE, CHOKE - CHOKE SHAFT	1	
20	10	48139	SCREW, CHOKE VALVE TO CHI	2	
21	1397	3327	FLOAT ASSEMBLY	1	
22	17	48140	PIN, HINGE - FLOAT	1	
23	1397	3323	LEVER, INTERMEDIATE CHOKE	1	
24	1397	3332	BAFFLE, FLOAT BOWL	1	
25	1397	3324	ROD, CHOKE	1	
26			CLIP, CHOKE ROD	1	4,3
27	1397	3318	ROD, VACUUM CONTROL	1	
28			CLIP, VACUUM CONTROL ROD	1	4,3
29	1397	3339	BRACKET ASSEMBLY, VACUUM	1	
30	10	48138	SCREW, VACUUM CONTROL B	1	
31	1397	3317	CONTROL ASSEMBLY, VACUUM	1	
32	1397	3320	HOSE, VACUUM	1	
33	1397	5641	POWER PISTON ASSEMBLY	1	
34	24	48142	SPRING, METERING ROD - PRI	1	
35	1397	3329	RETAINER, POWER PISTON	1	
36	1397	3326	RETAINER, PUMP DISCHARGE	1	
37			BALL, PUMP DISCHARGE	1	4,3
38	24	48141	SPRING, POWER PISTON	1	
39	1397	3331	INSERT, FLOAT BOWL	1	
40	1397	3325	FLOAT BOWL ASSEMBLY	1	