



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	65784A 1	STARTER MOTOR ASS'Y(LEFT H	1	SEE NOTE BELOW	
1	50	65785A 1	STARTER MOTOR ASS'Y(RIGHT H	1	SEE NOTE BELOW	
2	10	47462	SCREW, STARTER MOTOR TO C	2		
3	13	32993	LOCKWASHER, STARTER MOTO	2		
4	11	26995	NUT, STARTER TERMINAL (3/8"	1		
5	13	26995	LOCKWASHER, STARTER TERM	2		
6	11	26419	NUT, STARTER TERMINAL (#8)	2		
7		34625	WATER TEMPERATURE SENDEI	1		
8	13	26996	LOCKWASHER, WATER TEMPE	1		
9	11	20645	NUT, WATER TEMPERATURE	1		
10		34623	OIL PRESSURE SENDER ASSEM	1		
11	13	26996	LOCKWASHER, OIL PRESSURE	1		
12	11	20645	NUT, OIL PRESSURE SENDER	1		
13		38559	SWITCH, OIL PRESSURE	1		
14	12	20878	WASHER, OIL PRESSURE SWI	1		
15	11	20645	NUT, OIL PRESSURE SWITCH	1		
16		59755	ALTERNATOR ASSEMBLY	1	SEE NOTE BELOW SERIAL 0000	
16		69729	ALTERNATOR ASSEMBLY	1	SEE NOTE BELOW SERIAL 0417	
17	10	20055	SCREW, GROUND CABLE TO AL	1		
18	13	26996	LOCKWASHER, GROUND CABLE	1		
19	12	30164	WASHER, GROUND CABLE SCRE	1		
20		47498	BRACE, ALTERNATOR ADJUSTI	1		
21	10	29198	SCREW, ALTERNATOR BRACE T	1		
22	12	26168	WASHER, ALTERNATOR BRACE	1		
23	10	31381	SCREW, ALTERNATOR BRACE T	1		
24	13	32993	LOCKWASHER, ALTERNATOR BI	1		
25	12	22248	WASHER, ALTERNATOR BRACE	1		
26		47487	BRACKET, ALTERNATOR MOUN	1		
27	10	34353	SCREW, ALTERNATOR BRACKE	2		
27	10	32774	SCREW, ALTERNATOR BRACKE	1		
28	13	35048	LOCKWASHER, ALTERNATOR BI	3		
29	10	48308	SCREW, ALTERNATOR TO ALTE	1		
30	23	33186	BUSHING, ALTERNATOR BRACK	1		
31	12	20553	WASHER, ALTERNATOR BRACK	1		
32	11	23161	NUT, ALTERNATOR BRACKET SI	1		