



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	2983A17	IGNITION COIL ASSEMBLY	1		
2	10	45102	SCREW, IGNITION COIL CLAMP	1		
2	10	45103	SCREW, IGNITION COIL CLAMP	1		
3	12	37407	WASHER, IGNITION COIL SREW	1		
4	54	22740	CLIP, IGNITION COIL LEAD	1		
5		22789	"D" WASHER, IGNITION COIL S	1		
6	11	20645	NUT, IGNITION COIL SCREW	2		
7	10	27337	SCREW, IGNITION COIL TO ELEC	2		
8	13	26992	LOCKWASHER, IGNITION COIL S	2		
9		59816	CIRCUIT BREAKER	1	SERIAL 00000000-04178869	
10	10	36046	SCREW, CIRCUIT BREAKER (1,	2	SERIAL 00000000-04178869	
9	88	65093	CIRCUIT BREAKER	1	SERIAL 04178870-09999999	
11	10	47618	SCREW, CIRCUIT BREAKER TO E	2		
12	25	61999	GROMMET, CIRCUIT BREAKER S	4		
13	23	61998	SPACER, CIRCUIT BREAKER SCF	2		
14	12	47960	WASHER, CIRCUIT BREAKER SC	4		
15	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
16		65940	BRACKET, CIRCUIT BREAKER	1		
17	10	53787	SCREW, BRACKET TO ELECTRIC	2		
18	13	26996	LOCKWASHER, BRACKET SCREW	2		
19		25661	STARTER SOLENOID	1		
20	13	26993	LOCKWASHER, STARTER SOLEI	2		
21	11	20083	NUT, STARTER SOLENOID TERM	2		
22	13	26996	LOCKWASHER, STARTER SOLEI	2		
23	11	20645	NUT, STARTER SOLENOID TERM	2		
24	10	20031	SCREW, STARTER SOLENOID TI	2		
25	13	26992	LOCKWASHER, STARTER SOLEI	2		
26	84	64408	WIRING HARNESS	1		
27		26079	PLATE, WIRING HARNESS TO M	1		
28	10	46718	SCREW, WIRING HARNESS PLA	4		
29	332	2986A22	SWITCH BOX ASSEMBLY	1		
30	13	26996	LOCKWASHER, SWITCH BOX TE	7		
31	11	45076	NUT, SWITCH BOX TERMINAL	7		
32	10	45218	SCREW, GROUND WIRE TO SWI	1		
33		63878	COMPARTMENT, ELECTRICAL	1		
34	10	52498	SCREW, ELECTRICAL COMPART	2		
35	11	20696	NUT, ELECTRICAL COMPARTME	2		
36		63879	PLATE, SWITCH BOX	1		
37	25	57009	GROMMET, SWITCH BOX PLATE	1		
38	16	65941	STUD, SWITCH BOX AND COVER	4		
39	12	22772	LOCKWASHER, SWITCH BOX AN	4		