



4351

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	805833T	STARTER ASSEMBLY	1		
1	23	808305	BUSHING	1		
2		NSS	NOT SOLD SEPARATE, Bushing	1		
3		NSS	NOT SOLD SEPARATE, Screw,	1		
4		NSS	NOT SOLD SEPARATE, Washer	1		
5		NSS	NOT SOLD SEPARATE, Nut, (M	1		
6		NSS	NOT SOLD SEPARATE	1		
7		NSS	NOT SOLD SEPARATE	1		
8		808310	LEVER, Shift	1		
9		808311	STOP, Pinion	1		
10		808301T	CLUTCH DRIVE, Clutch	1		
11		808316	BRACKET, Support	1		
12	30	808309	BEARING, Ball (Center Support)	1		
13		803862	DRIVESHAFT	1		
14		NSS	NOT SOLD SEPARATE, Washer, (	1		
15		NSS	NOT SOLD SEPARATE, Washer, (	1		
16		NSS	NOT SOLD SEPARATE, Washer, (	2		
17		803873	BRACKET, Support	1		
18		NSS	NOT SOLD SEPARATE, Screw, (v	1		
19		NSS	NOT SOLD SEPARATE, Screw, (v	AR		
20		808299	SOLENOID	AR		
21		NSS	NOT SOLD SEPARATE (M6 x 19.1	2		
22		NSS	NOT SOLD SEPARATE, O-Ring	1		
23		NSS	NOT SOLD SEPARATE, Roll Pin	1		
24	30	808307	BEARING, Ball (Drive End)	1		
25		808312T	ARMATURE	1		
26	30	808308	BEARING, Ball (Commutator End)	1		
27	24	808306	SPRING, Brush	4		
28		808304	GROUND, Brush	2		
29		NSS	NOT SOLD SEPARATE, Screw, (v	2		
30		808304	GROUND	2		
31		NSS	NOT SOLD SEPARATE, Screw, (v	2		
32		808302	HOLDER, Brush	1		
33	25	803863	O-RING	1		
34		808313	FRAME, Commutator End	1		
35		NSS	NOT SOLD SEPARATE, Stud	1		
36		NSS	NOT SOLD SEPARATE, Screw, (v	2		
37		NSS	NOT SOLD SEPARATE, Thru Bolt,	2		