



DISTRIBUTOR AND IGNITION COMPONENTS

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		90747A 3	DISTRIBUTOR ASSEMBLY	1	
2		43557A 1	CAP, DISTRIBUTOR	1	
3	10	90926	SCREW, DISTRIBUTOR CAP	4	
4	27	98242	GASKET, DISTRIBUTOR CAP	1	
5		13524A 3	ROTOR	1	
6		42862	SENSOR WHEEL	1	
7	10	11252	SCREW, SENSOR WHEEL	3	
8	87	91019A 3	SENSOR ASSEMBLY	1	
9	10	47618	SCREW, SENSOR	1	
10	12	27736	WASHER, SENSOR SCREW	2	
11	43	47619 1	GEAR, DRIVE	1	
13	27	34486 1	GASKET, DISTRIBUTOR	1	4
14		52185	CLAMP, DISTRIBUTOR TO INTAK	1	
15	10	27165	SCREW, DISTRIBUTOR CLAMP	1	
17	13	26996	LOCKWASHER, DISTRIBUTOR T	2	
18	11	68219	NUT, DISTRIBUTOR TERMINAL	2	
19	84	42841A10	LEAD ASSEMBLY, DISTRIBUTOR	1	
20	84	43376A 2	SPARK PLUG WIRE KIT	1	
21	85	63709A 1	BOOT ASSEMBLY, SPARK PLUG	8	
22	33	59571	SPARK PLUG *NGK-BR6FS)	8	
23		54676	RETAINER, HIGH TENSION LEAD	2	
24		32783	RETAINER, HIGH TENSION LEAD	2	
25		32784	RETAINER, HIGH TENSION LEAD	2	
26	392	7803A 4	COIL, IGNITION	1	
27		77294	BRACKET, IGNITION COIL	1	
28	10	41408	SCREW, BRACKET (1-1/2")	1	
29	12	30164	WASHER, IGNITION COIL TERMINAL	2	
30	13	26996	LOCKWASHER, IGNITION COIL TERMINAL	2	
31	11	68219	NUT, IGNITION COIL TERMINAL	2	
32	10	25299	SCREW, IGNITION COIL (3/4")	2	
33	13	26993	LOCKWASHER, IGNITION COIL SCREW	2	
34	12	20084	WASHER, IGNITION COIL SCREW	2	
35		63192	RETAINER, HIGH TENSION LEAD	4	
36	10	37612	SCREW	2	
37	12	25909	WASHER, RETAINER SCREW	2	