



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	46	72774A32	WATER PUMP ASSEMBLY	1	
2	46	72774A40	BODY, WATER PUMP	1	
3		87631A 1	COVER, WATER PUMP	1	
4	10	73275	SCREW, WATER PUMP	5	
5	12	20084	WASHER, COVER SCREW	5	
6	27	94915	GASKET, COVER TO OUTER W	1	
7		94916	WEAR PLATE, OUTER	1	
8	27	94914	GASKET, BODY TO WEAR PLA	2	
9	19	59504	PLUG, IMPELLER	1	
10	47	59362	IMPELLER	1	
11	28	56662	KEY, IMPELLER DRIVE	1	
12		94576	WEAR PLATE, INNER	1	
13	25	94288	QUAD RING, PUMP HOUSING	1	
14	46	94913A 1	PUMP HOUSING ASSEMBLY	1	
15	26	90562	OIL SEAL, WATER PUMP SH	2	
16	30	72961	BALL BEARING, WATER PUM	2	
17		59501A 1	SHAFT WATER PUMP	1	
18	53	23720	SNAP RING, BALL BEARING RE	1	
19	26	72785	OIL SEAL, WATER PUMP SH	1	
20		47530	HUB, WATER PUMP PULLEY	1	
21		73798A 1	PULLEY, WATER PUMP	1	
22	10	47277	SCREW, PULLEY (3/4")	4	
23	13	39107	LOCKWASHER, PULLEY SCREW	4	4
24	22	32802	PLUG, PIPE (FOR WATER PUM	1	
25	57	74271	BELT, WATER PUMP (35")	1	
26		47489A 1	BRACKET ASSEMBLY, WATER P	1	
27	10	47462	SCREW, WATER PUMP BRACKE	1	
28	10	48948	SCREW, WATER PUMP BRACKE	1	
29	13	32993	LOCKWASHER, BRACKET SCRE	2	
30	12	30315	WASHER, BRACKET SCREW	1	
31	10	34354	SCREW, WATER PUMP BRACKE	1	
32	13	35048	LOCKWASHER, BRACKET SCRE	1	
33	12	29330	WASHER, WATER PUMP SCREW	1	
34		64177	BRACE, WATER PUMP	1	
35	10	47461	SCREW, BRACE TO ENGINE (1"	1	
36	13	32993	LOCKWASHER, BRACE SCREW	1	
37	12	30315	WASHER, BRACE SCREW	1	
38	10	35786	SCREW, WATER PUMP BRACE (1	
39	13	35048	LOCKWASHER, BRACE SCREW	1	
40	11	24883	NUT, BRACE SCREW	1	