



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	99419A 3	STARTER MOTOR	1		
2	10	47462	SCREW, STARTER MOTOR (1-1/2")	2		
3	13	32993	LOCKWASHER, STARTER MOTO	2		
4	11	86226	NUT, STARTER TERMINAL (3/8")	1		
5	85	79695	BOOT, INSULATOR-STARTER TE	1		
6	13	26995	LOCKWASHER, STARTER TERM	2		
7	11	26419	NUT, STARTER TERMINAL (#8-3)	2		
8		92497A 3	ALTERNATOR	1		
9	13	26996	LOCKWASHER, ALTERNATOR TI	1		
10	11	30968	NUT, ALTERNATOR TERMINAL (1		
11	13	21272	LOCKWASHER, ALTERNATOR TI	1		
12	11	64015	NUT, ALTERNATOR TERMINAL (1		
13		85013	BRACE, ALTERNATOR ADJUSTI	1		
14	10	47461	SCREW, ALTERNATOR BRACE (1		
15	13	32993	LOCKWASHER, ALTERNATOR BI	1		
16	12	30315	WASHER, ALTERNATOR BRACE	1		
17	10	29198	SCREW, ALTERNATOR BRACE (1		
18	12	26168	WASHER, ALTERNATOR BRACE	1		
19		57908 11	TUBING, ALTERNATOR LEADS	2		
20	12	96457	WASHER, ALTERNATOR TERMIN	1		
21		96116A 1	BRACKET, ALTERNATOR	1		
22	10	34353	SCREW, ALTERNATOR BRACKE	2		
22	10	37612	SCREW, ALTERNATOR BRACKE	1		
23	13	35048	LOCKWASHER, ALTERNATOR BI	3		
24	10	48308	SCREW, ALTERNATOR (3-3/4")	1		
25	12	20553	WASHER, ALTERNATOR BRACK	2		
26	23	33186	BUSHING, ALTERNATOR BRACK	1		
27	11	23161	NUT, ALTERNATOR BRACKET SI	1		