



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		44187	1 HOUSING, FLYWHEEL (W/REAR	1		
1		44187A	1 HOUSING, FLYWHEEL (W/O REAR	1		
2	19	12304	1 PLUG, TIMING WINDOW	1		
3		14043A	5 COVER ASSEMBLY, FLYWHEEL H	1	NOT USED ON STAFFERED INS	
4		87690	1 SEAL, FLYWHEEL HOUSING CO	1	NOT USED ON STAFFERED INS	
5	27	86015	1 GASKET, FLYWHEEL HOUSING	1	NOT USED ON STAFFERED INS	
6	10	41508	1 SCREW, COVER TO FLYWHEEL H	8	NOT USED ON STAFFERED INS	
7	10	37612	2 SCREW, FLYWHEEL HOUSING (1	2		
7	10	47688	2 SCREW, FLYWHEEL HOUSING (2	2		
7	10	34353	1 SCREW, FLYWHEEL HOUSING (1	1		
8	13	35048	6 LOCKWASHER, FLYWHEEL HOU	6		
9	12	20553	5 WASHER, FLYWHEEL HOUSING	5		
9	12	20572	1 WASHER, FLYWHEEL HOSUING	1		
10	54	62494	1 CLAMP, FLYWHEEL HOUSING SC	1		
11	16	64066	1 STUD, FLYWHEEL HOUSING (2-1	1		
12	11	32219	1 NUT, FLYWHEEL HOUSING STUI	1		
13	84	62826A	7 WIRE ASSEMBLY, GROUND	1		