



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	47455	STARTER MOTOR ASSEMBLY (S	1	SEE NOTE	
1	50	47454	STARTER MOTOR ASSEMBLY (O	1	SEE NOTE	
2	10	47462	SCREW, STARTER MOTOR TO (	2		
3	13	32993	LOCKWASHER, STARTER MOTO	2		
4	11	28517	NUT, STARTER TERMINAL (3/8"	1		
5	13	26995	LOCKWASHER, STARTER TERM	1		
6	11	26419	NUT, STARTER TEREMINAL (#8)	1		
7		36525	WATER TEMPERATURE SENDEI	1		
8	13	26996	LOCKWASHER, WATER TEMPEF	1		
9	11	20645	NUT, WATER TEMPERATURE SE	1		
10		52676	SWITCH, ELECTRICAL CHOKE	1		
11	13	26996	LOCKWASHER, ELECTRIC CHOK	1		
12	11	20645	NUT, ELECTRIC CHOKE SWITCH	1		
13		34623	OIL PRESSURE SENDER ASSEM	1		
14	13	26996	LOCKWASHER, OIL PRESSURE S	1		
15	11	20645	NUT, OIL PRESSURE SENDER T	1		
16	22	48556	BUSHING, REDUCER - OIL PRES	1		
17		56045	ALTERNATOR ASSEMBLY (SEE I	1	SEE NOTE	
18		47498	BRACE, ALTERNATOR ADJUSTI	1		
19	10	29198	SCREW, ALTERNATOR BRACE T	1		
20	12	26168	WASHER, ALTERNATOR BRACE	1		
21	10	31381	SCREW, ALTERNATOR BRACE T	1		
22	13	32993	LOCKWASHER, ALTERNATOR BI	1		
23	12	30315	WASHER, ALTERNATOR BRACE	1		
24		47487	BRACKET, ALTERNATOR MOUN	1		
25	10	34353	SCREW, ALTERNATOR BRACKE	2		
25	10	32774	SCREW, ALTERNATOR BRACKE	1		
26	13	35048	LOCKWASHER, ALTERNATOR BI	3		
27	10	48308	SCREW, ALTERNATOR TO ALTO	1		
28	23	33186	BUSHING, ALTERNATOR SCREW	1		
29	12	20553	WASHER, ALTERNATOR SCREW	2		
30	11	23161	NUT, ALTERNATOR SCREW	1		
31	10	20055	SCREW, GROUND WIRE TO ALT	1		
32	123	26996	LOCKWASHER, GROUND WIRE	1		
33	12	30164	WASHER, GROUND WIRE SCRE	1		