



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		55125A 7	RESERVOIR ASSEMBLY	1		
-	37	53237	DECAL, RESERVOIR	1		
2	32	55126	TUBE, OVERFLOW	1		
3	16	29988	STUD, HEAT EXCHANGER STF	2		
4	16	33111	STUD, THERMOSTAT COVER	2		
5	22	39737	SLEEVE, WATER FILLER	1		
6	36	55143	CAP, RESERVOIR WATER FILLER	1		
7		55127	END CAP, EXHAUST MANIFOLD	2		
8	32	57929 3	HOSE, CONNECTOR - END CAP	2		
9	54	38889	CLAMP, CONNECTOR HOSE	4		
10	10	35386	SCREW, END CAP TO EXHAUST	6		
10	10	53016	SCREW, END CAP TO EXHAUST	2		
11	13	39107	LOCKWASHER, END CAP SCREW	8		
12	12	26825	WASHER, END CAP SCREW	8		
13		55075A 1	HEAT EXCHANGER ASSEMBLY	1		
14	24	55144	GASKET, HEAT EXCHANGER INL	1		
15		55208A 1	END CAP ASSEMBLY, HEAT EXC	1		
16	23	47511	SLEEVE, END CAP	2		
17	27	55136	GASKET, END CAP TO HEAT EXC	1		
18		55129	END CAP, HEAT EXCHANGER	1		
19	27	55138	GASKET, END CAP TO HEAT EXC	1		
20	22	32802	PLUG, PIPE - END CAP	1		
21	10	55137	SCREW, END CAP TO HEAT EXC	1		
22	12	20553	WASHER, END CAP SCREW	2		
23	11	23161	NUT, END CAP SCREW	1		
24	32	57016	HOSE, HEAT EXCHANGER END	1		
25	54	32780	CLAMP, HEAT EXCHANGER HOS	2		
26	54	47715	CLIP, HEAT EXCHANGER HOSE	2		
27		55145	STRAP, MOUNTING - HEAT EXC	2		
28		55124	PADDING, MOUNTING STRAP	2		
29	12	26825	WASHER, MOUNTING STRAP ST	2		
30	11	25594	NUT, MOUNTING STRAP STUD	2		
31	32	55317	HOSE, HEAT EXCHANGER TO W	1		
32	54	32781	CLAMP, HOSE TO HEAT EXCHAN	2		