



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47493A 7	DISTRIBUTOR ASSEMBLY, COM	1		
1		47493A 6	DISTRIBUTOR ASSEMBLY, COM	1		
2	393	3230	CAP, DISTRIBUTOR	1		
3		49924	ROTOR, DISTRIBUTOR	1		
4		48789A 1	HOUSING ASSEMBLY, ADAPTC	1		
5	17	20032	PIN, DOWEL - ADAPTOR HOL	2		
6	54	48575	CLAMP, CAP TO ADAPTOR HOL	2		
7	10	37572	SCREW, DISTRIBUTOR CLAMP	2		
8	13	26996	LOCKWASHER, DISTRIBUTOR	2		
9	393	2918A 5	TRIGGER ASSEMBLY	1		
10	10	47618	SCREW, TRIGGER ATTACHING	4		
11	13	26996	LOCKWASHER, TRIGGER ATT	4		
12	10	26595	SCREW, ADAPTOR HOUSING F	4		
13	13	26995	LOCKWASHER, ADAPTOR HOL	4		
14	43	47649	GEAR, DISTRIBUTOR (STANDA	1		
14	43	47619	GEAR, DISTRIBUTOR (OPPISIT	1		
15	17	47617	ROLL PIN, GEAR TO DISTRIBUTOR	1		
16		52618	JUMPER WIRE, DISTRIBUTOR	1		
17	27	52184	GASKET, DISTRIBUTOR	1		
18		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
19	10	54528	SCREW, DISTRIBUTOR CLAMP	1		
20	10	33231	SCREW, DISTRIBUTOR GROUND	1		
21		54094A 1	ADAPTOR HOUSING ASSEMBLY,	1		
22		54205	BUMPER, ADAPTOR HOUSING	2		
23	16	54204	STUD, ADAPTOR HOUSING TO	3		
24	37	54347	DECAL, DISTRIBUTOR CAP	1		
25	10	25876	SCREW, ADAPTOR HOUSING TC	2		
26	13	26996	LOCKWASHER, HOUSING AND F	3		
27		54986A 1	RETAINER ASSEMBLY, SPARK P	1		
27		54986A 2	RETAINER ASSEMBLY, SPARK P	1		
28	16	54459	STUD, RETAINER TO COVER	2		
29		54206	INSERT, LOWER RETAINER	1		
30	10	48591	SCREW, LOWER RETAINER TO,	1		
31		54987A 1	RETAINER ASSEMBLY, SPARK P	1		
31		54987A 2	RETAINER ASSEMBLY, SPARK P	1		
32		54095A 1	COVER ASSEMBLY, DISTRIBUTOR	1		
33	11	45812	NUT, ADAPTOR HOUSING AND F	5		
34		54380A 1	CABLE ASSEMBLY, HIGH TENSIC	1		
34		54381A 1	CABLE ASSEMBLY, HIGH TENSIC	1		
34		54380A 4	CABLE ASSEMBLY, HIGH TENSIC	1		
34		54380A 2	CABLE ASSEMBLY, HIGH TENSIC	1		