



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47810	TRANSMISSION (DIRECT DRIVE)	1,...		
1		47811	TRANSMISSION (1.523:1 REDUC	,1,...		
1		47812	TRANSMISSION (1.909:1 REDUC	,,1,...		
1		47813	TRANSMISSION (2.57:1 REDUC	,,,1,...		
1		47814	TRANSMISSION (2.909:1 REDUC	,,,,1,...		
2	10	38197	SCREW, TRANSMISSION TO ENI	6,6,6,6,		
3	13	32993	LOCKWASHER, TRANSMISSION	6,6,6,6,		
4	22	47629	ELBOW, HOSE TO TRANSMISSI	1,1,1,1,		
5	32	47516 3	HOSE, OIL COOLER TO TRANSM	1,1,1,1,		
6	22	47630	ELBOW, HOSE TO OIL COOLER (	1,1,1,1,		
7		47613	SWITCH, NEUTRAL SAFETY	1,1,1,1,		
8		48386	FLANGE (1")	OPT.,0		
8		48387	FLANGE (1 1/8")	OPT.,0		
8		48388	FLANGE (1 1/4")	OPT.,0		
8		48389	FLANGE (1 3/8")	OPT.,0		
8		48390	FLANGE (1 1/2")	OPT.,0		
9		48649	BRACKET, SHIFT CABLE	1,1,1,1,		
10	12	37407	WASHER, SHIFT CABLE TO BRAI	1,1,1,1,		
11	11	46438	NUT, SHIFT CABLE TO BRACKET	1,1,1,1,		
12	23	36159	BUSHING, REDUCING - TRANSM	1,1,1,1,		
13	22	47631	ELBOW, HOSE TO TRANSMISSI	1,1,1,1,		
14	32	47516 2	HOSE, TRANSMISSION TO OIL C	1,1,1,1,		
15	22	47630	ELBOW, HOSE TO OIL COOLER (	1,1,1,1,		
16		48515	LEVER, SHIFT - TRANSMISSION	1,1,1,1,		
17	12	20722	WASHER, SHIFT LEVER TO TRA	1,1,1,1,		
18	13	26993	LOCKWASHER, SHIFT LEVER TC	1,1,1,1,		
19	11	20083	NUT, SHIFT LEVER TO TRANSMI	1,1,1,1,		
20		48652	ADAPTOR, SHIFT CABLE TO SHII	1,1,1,1,		
21	16	48680	STUD, SHIFT CABLE ADAPTOR T	1,1,1,1,		
22	12	20533	WASHER, SHIFT CABLE ADAPTC	1,1,1,1,		
23	11	46887	NUT, SHIFT CABLE ADAPTOR ST	1,1,1,1,		
24	13	29402	WAVE WASHER, SHIFT CABLE A	1,1,1,1,		
25	12	37407	WASHER, SHIFT CABLE ADAPTC	1,1,1,1,		
26	11	46438	NUT, SHIFT CABLE ADAPTOR ST	1,1,1,1,		
27	10	20639	SCREW, SHIFT CABLE TO ADAP	1,1,1,1,		
28	12	22753	WASHER, SHIFT CABLE SCREW	1,1,1,1,		
29	11	46793	NUT, SHIFT CABLE SCREW (5/16	1,1,1,1,		
30		47501	BRACKET, MOUNTING (REAR)	2,2,2,2,		
31	10	37269	SCREW, MOUNTING BRACKET T	4,4,4,4,		
32	13	32993	LOCKWASHER, MOUNTING BRA	4,4,4,4,		
33		47499	BRACKET, MOUNTING (FRONT)	2,2,2,2,		