



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	99510A13	WIRING HARNESS	1		
2		26079A	2 PLATE ASSEMBLY	1		
3	10	15001	SCREW	4		
4		98493A	2 MOUNTING BRACKET	1		
5	10	65746	SCREW	3		
6		97257A	1 WATER TEMPERATURE SENDEI	1		
6		49734A	1 WATER TEMPERATURE SENDEI	OPT		
7		90806	OIL PRESSURE SENDER	1		
7		37293	OIL PRESSURE SENDER (DUAL)	OPT		
8	13	26996	LOCKWASHER	2		
9	11	68219	NUT	2		
10	22	46932	ELBOW	1		
11	22	42554	NIPPLE	1		
12	87	80502A	OIL PRESSURE SWITCH	1		
13	22	18021	FITTING	1		
14		41170T	MOUNTING BRACKET	1		
15	10	98261	SCREW	1		
16	13	35048	LOCKWASHER	1		
17	10	37612	SCREW	1		
18	13	35048	LOCKWASHER	1		
19	12	20572	WASHER	1		
20	23	57369	SPACER	1		
21	88	11178	CIRCUIT BREAKER (50AMP)	1		
22	13	26996	LOCKWASHER	2		
23	11	68219	NUT	2		
24	10	45862	SCREW (7/8")	2		
25	10	71405	SCREW	1		
26	12	56681	WASHER	2		
27	11	61356	NUT	3		
28	85	96819T	INSULATOR	1		
29	89	96054	STARTER SOLENOID	1		
30	10	47910	SCREW (5/8")	2		
31	11	20088	NUT	2		
32	13	26992	LOCKWASHER	2		
33	11	26419	NUT (8-32)	2		
34	11	94330	NUT (1/4-20)	2		
35		15247A	1 IGNITION AMPLIFIER	1		
36	84	15275A	1 HARNESS	1		
37	10	76630	SCREW	3		
38	13	26992	LOCKWASHER	3		
39	22	92152	SPACER	2		