



1786

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		860234A	1 HEAT EXCHANGER	1		
NS		814875	COVER-END	2		
NS	27	803644	GASKET-END COVER	2		
NS	10	814877	BOLT	2		
NS	25	814878	O-RING	2		
NS	36	814879	1 CAP-PRESSURE	1		
2		860326A	2 BRACKET ASSEMBLY-HEAT EXC	1		
3		18431	PAD	2		
4	54	815504388	CLAMP	2		
5		71587A10	RECOVERY KIT-COOLANT	1	(SEE NOTE BELOW)	
6		71587A11	BOTTLE-COOLANT RECOVERY	1		
7		72058	CAP	1		
8		861198A	1 HOUSING-THERMOSTAT	1		
9	25	807134	1 SEAL	1		5
10	23	52020	SLEEVE-HOSE	1		
11	22	32803	PLUG-PIPE (3/8 IN.)	1		
12		99155	1 THERMOSTAT	1		
13		807075A	1 COVER-THERMOSTAT	1		
14	10	29198	SCREW & LOCKWASHER (5/16-1	2		
15	10	58640	SCREW (3/8-16 X 1-1/4 IN.)	2		
16	22	32802	2 PLUG-PIPE (1/8 IN.)	1		
17	27	53045	1 GASKET-THERMOSTAT HOUSIN	2		5
18	32	42850	69 HOSE-HEAT EXCHANGER TO HE	1		
19	32	860327	HOSE-HEAT EXCHANGER TO EX	1	(STBD) (2 PC MANIFOLD)	
19	32	860421	HOSE-HEAT EXCHANGER TO EX	1	(STBD) (1 PC MANIFOLD)	
20	32	862150	HOSE-HEAT EXCHANGER TO EX	1	(PORT) (2 PC MANIFOLD)	1
20	32	862125	HOSE-HEAT EXCHANGER TO EX	1	(PORT) (1 PC MANIFOLD)	1
21	54	815504220	CLAMP-HOSE	6		
22	32	860485	HOSE-THERMOSTAT BY-PASS	1		
23	32	860419	HOSE-THERMOSTAT HOUSING	1		
24	32	860332	HOSE-OIL COOLER TO HEAT EX	1		
25	54	815504222	CLAMP-HOSE	6		
26	32	861059	HOSE-WATER PUMP TO HEAT E	1		
27	54	815504232	CLAMP-HOSE	2		
28	32	805987	1 HOSE-WATER PUMP TO INTAKE	1		
29	54	815504228	CLAMP-HOSE	2		
30	22	860346	ELBOW-90 DEG. (3/4-14)	1		
31	22	806242	CONNECTOR-HOSE (1/2-14)	1		
32		860315A	1 EXTENDER-HOSE	1		
33		860418T	BRACKET	1		
34		860417T	CLAMP	1		