



| Parts List | | | | | | |
|------------|-------|---------|---------------------------|------|--------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 22 | 805059 | FITTING-Bushing | 1 | | |
| 2 | 87 | 805024 | SWITCH-OIL PRESSURE | 1 | (S/N-0M330610 and below) | |
| 2 | 87 | 864252 | SWITCH-OIL PRESSURE | 1 | (S/N-0M330611 and Up) | |
| 3 | 22 | 28624 | FITTING-T | 1 | | |
| 4 | | 815425T | SENDER-OIL PRESSURE | 1 | | |
| 4 | | 37293T | SENDER-OIL PRESSURE | OPT. | (DUAL STATION) | |
| 5 | | 97257A | SENDER-WATER TEMPERATUR | 1 | | |
| 5 | | 49734 | SENDER-WATER TEMPERATUR | OPT. | (DUAL STATION) | |
| 6 | 13 | 26996 | LOCKWASHER (#10) | 2 | | |
| 7 | 11 | 68219 | NUT (#10-32) | 2 | | |
| 8 | 87 | 805605A | SWITCH-PRESSURE | 1 | AUDIO WARNING SYSTEM | |
| 9 | 13 | 26996 | LOCKWASHER (#10) | 1 | AUDIO WARNING SYSTEM | |
| 10 | 11 | 68219 | NUT (#10-32) | 1 | AUDIO WARNING SYSTEM | |
| 11 | | 816492A | ALARM INSTALLATION KIT | 1 | AUDIO WARNING SYSTEM | |
| 12 | 22 | 805059 | BUSHING-REDUCER | 1 | | |
| 13 | | 805218T | SENSOR-COOLANT TEMPERATL | 1 | | |
| 14 | | 830796A | CONNECTOR | 1 | | |
| 15 | | 805368T | BRACKET-ELECTRICAL | 1 | | |
| 16 | 88 | 806950 | BREAKER-CIRCUIT (50 AMP) | 1 | | |
| 17 | 10 | 68513 | SCREW (#10-32 X 3/8 IN.) | 2 | | |
| 18 | 13 | 26996 | LOCKWASHER (#10) | 2 | | |
| 19 | 10 | 57583 | SCREW (#8-32 X 3/8 IN.) | 2 | | |
| 20 | 89 | 96158T | SOLENOID-STARTER | 1 | | |
| 21 | 13 | 26995 | LOCKWASHER (#8) | 2 | | |
| 22 | 11 | 26419 | NUT (#8-32) | 2 | | |
| 23 | 10 | 805564 | SCREW (1/4-20) | 2 | (ALPHA) | |
| 24 | 16 | 805459 | STUD-MERCATHODE MOUNTINC | 1 | (BRAVO) | |
| 25 | 13 | 26992 | LOCKWASHER (1/4 IN.) | 2 | | |
| 26 | 11 | 94330 | NUT (1/4-20) | 2 | | |
| 27 | 85 | 97861 | INSULATOR-STARTER SOLENOI | 1 | | |