



- 1-Fuel Pump
- 2-Throttle Body
- 3-Distributor
- 4-Coil
- 5-Manifold Air Temperature (MAT) Sensor
- 6-Data Link Connector (DLC)
- 7-Manifold Absolute Pressure (MAP) Sensor
- 8-Knock Sensor
- 9-Idle Air Control (IAC)
- 10-Throttle Position (TP) Sensor
- 11-Engine Coolant Temperature (ECT) Sensor
- 12-Electronic Control Module (ECM)
- 13-Water Temperature Sender
- 14-Fuel Pump Relay
- 15-Ignition/System Relay
- 16-Fuses (15 Amp) Fuel Pump, (15 Amp) ECM/DLC/Battery, (10 Amp) ECM/Injector/Ignition/Knock Module
- 17-Oil Pressure Sensor
- 18-Harness Connector To Starting/Charging Harness
- 19-Positive (+) Power Wire To Engine Circuit Breaker
- 20-Shift Plate
- 21-Gear Lube Monitor
- 22-Fuel Pressure Switch

19853

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	861238A	1 WIRING HARNESS-EFI	1	SN# 0L012009 THRU 0L359999	
-	84	861157T	1 WIRING HARNESS, EFI	1	SN# 0L360000 & Up	