



DISTRIBUTOR

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		805185A37	DISTRIBUTOR ASSEMBLY	1		
2		<a href="#">815407A 2</a>	CAP-DISTRIBUTOR	1		
3	10	90926	SCREW (#10-32 X 13/16 IN.)	4		
4	27	805760	GASKET	1		
5		<a href="#">13524A 6</a>	ROTOR/SENSOR WHEEL	1		
6	87	861780A 2	SENSOR ASSEMBLY	1		
7	10	66686	SCREW (#10-32 X 1 IN.)	2		
7	10	72202	SCREW (#10-32 X 1-1/4 IN.)	1		
8	43	818807	DRIVE GEAR	1		
9	17	47617	PIN	1		
10	12	90931	WASHER	1		3
11	27	34486 3	GASKET	1		
12		52185	CLAMP	1		
13	10	806681	SCREW (3/8-16 X 7/8 IN.)	1		
14	84	816608A82	CABLE KIT-IGNITION (SPARK PLL	1		
15	85	63709A 1	BOOT KIT	8		
16	33	816336	SPARK PLUG	8		
17	392	805570A 2	COIL-IGNITION	1		
18		65970T 1	BRACKET-COIL	1		
19	10	41408	SCREW (#10-32 X 1-1/2 IN.)	1		
20	13	26996	LOCKWASHER (#10)	2		
21	11	68219	NUT (#10-32)	2		
22	10	98261	SCREW (3/8-16 X 3/4 IN.)	1		
23	12	20553	WASHER	1		
24	16	90096A 1	STUD ASSEMBLY	2		
25	54	72821	RETAINER	2		
-	27	807756A96	GASKET SET-ENGINE OVERHAU	1		