



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	32	863489	HOSE, Power Steering Cooler to Cl	1		
2	21	864206A	CHECK VALVE ASSEMBLY	1		
3	32	863811	HOSE, Check Valve to Fuel Cooler	1		
4	32	864551	HOSE, Intake Bypass to Circulating	1		
5	32	864431	HOSE, Distribution Housing to Heal	1		
6	32	864713	HOSE, Thermostat Housing to Upp	1	(Without Riser)	
6	32	864933	HOSE, Thermostat Housing to Upp	1	(With Riser)	
7	32	864714	HOSE, Thermostat Housing to Upp	1	(Without Riser)	
7	32	864931	HOSE, Thermostat Housing to Upp	1	(With Riser)	
8	32	864534	HOSE, Thermostat Housing to Low	1	(Starboard)	
9	32	864575	HOSE, Thermostat Housing to Low	1	(Port)	
10	32	863781	HOSE, Fuel Cooler to Accumulator	1		
11	32	864506	HOSE, Heat Exchanger to Thermo:	1		
12	32	864507	HOSE, Heat Exchanger to Thermo:	1		
13	32	864532	HOSE, Heat Exchanger to Elbow (S	1	(Without Riser)	
13	32	864934	HOSE, Heat Exchanger to Elbow (S	1	(With Riser)	
14	32	864726	HOSE, Heat Exchanger to Elbow (F	1	(Without Riser)	
14	32	864934	HOSE, Heat Exchanger to Elbow (F	1	(With Riser)	
15	32	863611	Hose, Sea Pump to Power Steering	1		
16	54	815504212	CLAMP, Worm Gear - SS, Hose	1		
17	54	815504216	CLAMP, Worm Gear, Hose	1		
18	54	815504222	CLAMP, Worm Gear, Hose	1		
19	54	815504228	CLAMP, Worm Gear, Hose	1		
20	54	815504232	CLAMP, Hose	1		
21	32	864886	HOSE, Heat Exchanger to Circulat	1		
22	54	815504224	CLAMP, Hose	1		
23		864395T01	HEAT EXCHANGER, Closed Coolin	1		
24		814875	COVER, Heat Exchanger End	2		
25	27	803644	GASKET, End Cover	2		
26	10	814877	BOLT	2		
27	25	814878	O-RING, Special	2		
28	36	814879	CAP, Pressure	1		
29	10	805559	SCREW, (.375-16 x .875)	1		
30	10	34353	SCREW, (.375-16 x 1.00)	2		
31	54	815504396	CLAMP, Worm Gear, Heat Exchang	1		
32		71587A10	COOLANT RECOVERY KIT	1		
33		71587A11	BOTTLE, Coolant Recovery Kit	1		
34		72058	CAP, Coolant Recovery Bottle	1		
35	32	863343	HOSE, Sea Water Pump to Water f	1		
36		18431	PAD, Heat Exchanger	1		
37		864494T	BRACKET, Cooler	1		