



22930

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	866332T01	WIRING HARNESS	1		
2	11	889664	NUT, (1.500-18) Black Nylon	1		
3		865480T	BRACKET, Harness Mounting/Liftir	1		
4	10	98261	SCREW, (.375-16 x .750)	2		
5		865830T05	MODULE ASSEMBLY, ECM	1	(Alpha-Standard Cooling)	
5		865831T05	MODULE ASSEMBLY, ECM	1	(Alpha-Closed Cooling)	
5		865832T04	MODULE ASSEMBLY, ECM	1	(Bravo-Standard Cooling)	
5		865833T04	MODULE ASSEMBLY, ECM	1	(Bravo-Closed Cooling)	
6	10	821300 25	SCREW, (M6 x 25)	3		
7	12	65567	WASHER, (.265 x .750 x .048)	3		
8	25	834985	GROMMET	3		
9	23	856954	BUSHING	3		
10		863424T	BRACKET	1		
11	10	860008	SCREW, Torx (.250-20 x .625)	3		
12		859318T 1	TERMINATOR, 10 Pin (CAN 1 and	1		
13	54	865205	CLIP, Relay Mounting	2		
14	54	804352	CLIP, Fuse Block Mounting	1		
15		858754	COVER, Fuse, Fuse	1		
16		865202T	RELAY	1		
17	88	832969 15	FUSE, Blue - 15 Ampere	2		
17	88	832969 20	FUSE, Yellow - 20 Ampere	3		
18		866345T	BRACKET	1		
19	88	865827T	CIRCUIT BREAKER, 50 Ampere	1		
20	11	826709106	NUT, (#10-32)	2		
21	85	89919	BOOT, Insulator (Black)	2		
22	10	830861	SCREW, (8-32 x .625)	1		
23		816492A15	ALARM KIT	1		
24	84	95084A 9	CABLE ASSEMBLY, (91.00 Inches)	1		
25	88	79091	FUSE, 20 Ampere	1		
26	84	95084A10	CABLE ASSEMBLY, (5.00 Inches)	1		
27		864337A 1	CONNECTOR, Bravo Shift Interrupt	1	(Black Wire)	
28	87	815425T	SENDER ASSEMBLY, Oil	1		
28		37293T	SENDER ASSEMBLY, Oil	1	(Dual Station)	
29		881879010	SENSOR, Pressure	1	(Power Steering Cooler)(Power Ste	
29		881879A 2	SENSOR KIT, (100 PSI)	1	(Oil)	
30		878187	SENSOR ASSEMBLY, Knock	1		
31	84	812733A 2	HARNESS, Extension (Lube Bottle)	1		