



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	812604A 2	STARTER MOTOR	1		
2		811862	FRAME	1		
3	30	814465	BALL BEARING	1		
4		811863	BRUSH HOLDER	1		
5	24	814467	SPRING	4		
6		811864	ARMATURE	1		
7		811882	SHIELD	1		
8		811897	GEAR AND BEARING	1		
9		814479	BEARING ROLLER	1		
10		814472	SHAFT AND GEAR	1		
11		811896	DRIVE	1		
12		33291	COLLAR	1		
13	53	33290	RETAINING RING	1		
14		814474	THRUST COLLAR	1		
15		814475	DRIVE HOUSING	1	INCLUDES STARTER SWITCH, I 8	
16	23	814476	BUSHING	1		
17		N.S.S.	NUT	1		
18	10	814468	SCREW	2		
19	10	814477	THRU BOLT	2		