



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	806964A 3	STARTER MOTOR ASSEMBLY	1	(SEE "STARTER MOTOR" 5 FOI	
2	10	805343 2	SCREW (3/8-16 x 4-3/8 in.)	2		
3	11	806949	NUT (M8 x 1.5)	1		
4	11	40021 1	NUT (M5 x 0.8)	1		
5	13	26996	LOCKWASHER (#10)	1		
6	85	79695	INSULATOR	1		
7		817119A 4	ALTERNATOR ASSEMBLY	1	(SEE "ALTERNATOR (MANDO)"	
8	13	26996	LOCKWASHER (#10)	1		
9	11	79989	NUT (10-24)	1		
10	12	96457	WASHER-Phenolic	1		
11	13	26992	LOCKWASHER (1/4 in.)	1		
12	11	94330	NUT (1/4-20)	1		
13		85013T	BRACE-Alternator Adjusting	1		
14	10	98261	SCREW (3/8-16 x 3/4 in.)	1		
15	10	29198	SCREW (5/16-18 x 7/8 in.)	1		
16	12	26168	WASHER	1		
17		57908 11	TUBING	2		
18		15083T	BRACKET-Alternator	1		
19	10	37612	SCREW (3/8-16 x 1-1/4 in.)	2		
19	10	34353	SCREW (3/8-16 x 1 in.)	1		
20	12	20553	WASHER	3		
21	10	56743	SCREW (3/8-24 x 3-1/8 in.)	1		
22	11	23161	NUT (3/8-24)	1		