



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	99418A2	STARTER ASS'Y (BRAVO PLUG-II)	1	SEE STARTER ASSEMBLY (50-9	6
1	50	806964A3	STARTER ASS'Y (BRAVO PLUG-II)	1	SEE STARTER ASSEMBLY (50-8	
2	10	805343	SCREW - SPECIAL	1		
3		89057	BRACE - (3.500 In. Starter)	1		
4	12	29245	WASHER - (3.500 In. Starter)	2		
5	11	56374	NUT (10M) (3.500 In. Starter)	1		
6	10	35765A1	SCREW & WASHER (.312-18 x .62	1		
7	11	32561	PLUG - (3.50 In. Starter)	1		
8	11	40021	NUT (5M)	1		
9	85	79695	BOOT - INSULATOR	1		
10	11	15874	NUT (10M) (3.500 In. Starter)	1		
10	11	40063	NUT (8M) (2.875 In. Starter)	1		
10	15	817272	SHIM - SPECIAL	1		
12	50	17251A3	STARTER ASSEMBLY (DRIVELIN	1	SEE STARTER ASSEMBLY (50-1	6
12	50	808011A1	STARTER ASSEMBLY (DRIVELIN	1	SEE STARTER ASSEMBLY (50-8	
13	10	47461	SCREW (.437-14 x1.00)	2		
14	13	32993	LOCKWASHER (.437)	2		
15	13	26993	LOCKWASHER (.312)	1		
16	11	40026	NUT (M10)	1		
17		817119	ALTERNATOR ASSEMBLY (BLUE	1	SEE ALTERNATOR (MANDO #A)	
18	13	26992	LOCKWASHER (.250)	1		
19	11	56374	NUT (.250-20)	1		
20	12	96457	WASHER	1		
21	13	26996	LOCKWASHER (#10)	1		
22	11	79989	NUT (#10-24)	1		
23		85013T	BRACE - ALTERNATOR ADJUSTI	1		
24	12	45176	WASHER	1		
25	10	825427	SCREW (.437-14 x1.250)	1		
26	12	26168	WASHER	1		
27	10	29198	SCREW (.375-24 x3.750)	1		
28	23	33186	BUSHING	1		
29	12	20553	WASHER	3		
30	10	48308	SCREW (.375-24 x3.750)	1		
31		57908	SLEEVE - ALTERNATOR LEAD	1		
32		848146	BRACKET - ALTERNATOR MOUN	1		
33	12	45176	WASHER	3		
34	10	99204	SCREW (.437-14 x1.00)	2		
34	10	825427	SCREW (.437-14 x 1.250)	1		
35	11	23161	NUT (.375-24)	1		
36	54	848130	CLIP - HOSE CIRCULATING PUMF	1		