



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		87290A 4	HOUSING ASSEMBLY-Thermostat	1		
2	23	47511	SLEEVE	1		
3	22	32803	PLUG (.375)-Pipe	2		
4	22	98477A 2	VALVE ASSEMBLY	1		
5		807252 1	THERMOSTAT (140 DEGREES)	1		
6	27	47510	GASKET-Thermostat	1		1
7	23	47508	SLEEVE-Thermostat	1		
8	27	41812 2	GASKET-Thermostat Cover	1		1
9		47441A 1	COVER-Thermostat	1		
10	10	14164	SCREW (.375-16 x 4.375)	2		
11	12	20553	WASHER	2		
12	27	53045 1	GASKET-Thermostat Housing	1		1
13	32	848178	HOSE- Pump to Cooler	1		
13	32	821736	HOSE-Water Pump to Oil Cooler	1		
14	54	18076 6	CLAMP	8		
15	32	17435 65	HOSE-Sea Pump to Drive Unit	1		
16	32	12818	HOSE-Oil Cooler to Oil Cooler	1		
17	22	13177	TUBE-Water Hose	1	(NON POWER STEERING)	
18	32	64346	HOSE-Oil Cooler to Thermostat Hou	1		
19	32	89718 1	HOSE-Thermostat Housing to Wate	1		
20	54	18076 8	CLAMP	2		
21	32	89749 1	HOSE-Thermostat Cover	1	(PORT)	
22	32	89730 1	HOSE-Thermostat Cover	1	(STARBOARD)	
23	54	18076 4	CLAMP	8		
24	32	33220 70	HOSE (48.00 In. Bulk) (Cut 17.00 Ir	2		
24	32	847764A 2	HOSE ASSEMBLY (17.00 In.)	2		
25		12552	LIFTING EYE	1		
26	54	847752 18	CLAMP-Hose	4		
-	27	818572A94	Gasket Set	-		