



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		805439T	ELECTRICAL BOX	1	(USE WITH THUMB SCREW RE)	
1		807323A 5	ELECTRICAL BOX	1	(USE WITH LOCKING CLIP)	
2		806762A 1	VELCRO KIT	1		
3		805443T	SPARK CONTROL MODULE	1		
4	10	73286	SCREW	OPT		6
5	11	64015	NUT	OPT		6
6	89	96054	STARTER SOLENOID	1		
7	13	26995	LOCKWASHER (#8)	2		
8	11	26419	NUT (8-32)	2		
9	13	26992	LOCKWASHER (1/4 IN.)	2		
10	11	94330	NUT (1/4-20)	2		
11	12	35462	WASHER	2		
12	11	64015	NUT	2		
13	85	97861	INSULATOR	1		
14	88	11178	CIRCUIT BREAKER	1		
15	10	45862	SCREW	2		
16	11	61356	NUT	2		
17	13	26996	LOCKWASHER	2		
18	11	68219	NUT	2		
19		805615A 2	THUMB SCREW	1		
20		42600A 3	CONTROLLER	1		
21	12	56681	WASHER	2		
22	11	805562	NUT	2		
23	11	68219	NUT	4		
24	10	62568	SCREW	1		
25	23	92152	SPACER	3		
26	12	35462	WASHER	3		
27	11	64015	NUT	3		
28		806719T 4	ECM MODULE	1	(454 MAGNUM) USE WITH 5/8 IN	
28		806709T 6	ECM MODULE	1	(502 MAGNUM) USE WITH 5/8 IN	
29	10	54615	SCREW (5/8 IN.)	4	USE WITH 5/8 IN. SCREW	
28		806719T 6	ECM MODULE	1	(454 MAGNUM) USE WITH 1-1/4 2	
28		806719T 6	ECM MODULE	1	(454 MAGNUM) USE WITH 1-1/4 2	
28		806709T 8	ECM MODULE	1	(502 MAGNUM) USE WITH 1-1/4 2	
29	10	76596	SCREW (1-1/4 IN.)	4	USE WITH 1-1/4 IN. SCREW	
30	12	20533	WASHER	4		
31	11	805562	NUT	3		
32		805615A 1	THUMB SCREW	1	(OLD DESIGN)	
33		805704	SPARE FUSE	1	(15 AMP)	
33		805703	SPARE FUSE	1	(10 AMP)	
34		805439T 1	ELECTRICAL COVER	1	(USE WITH THUMB SCREW/RE)	