


A= See Starter & Alternator Section

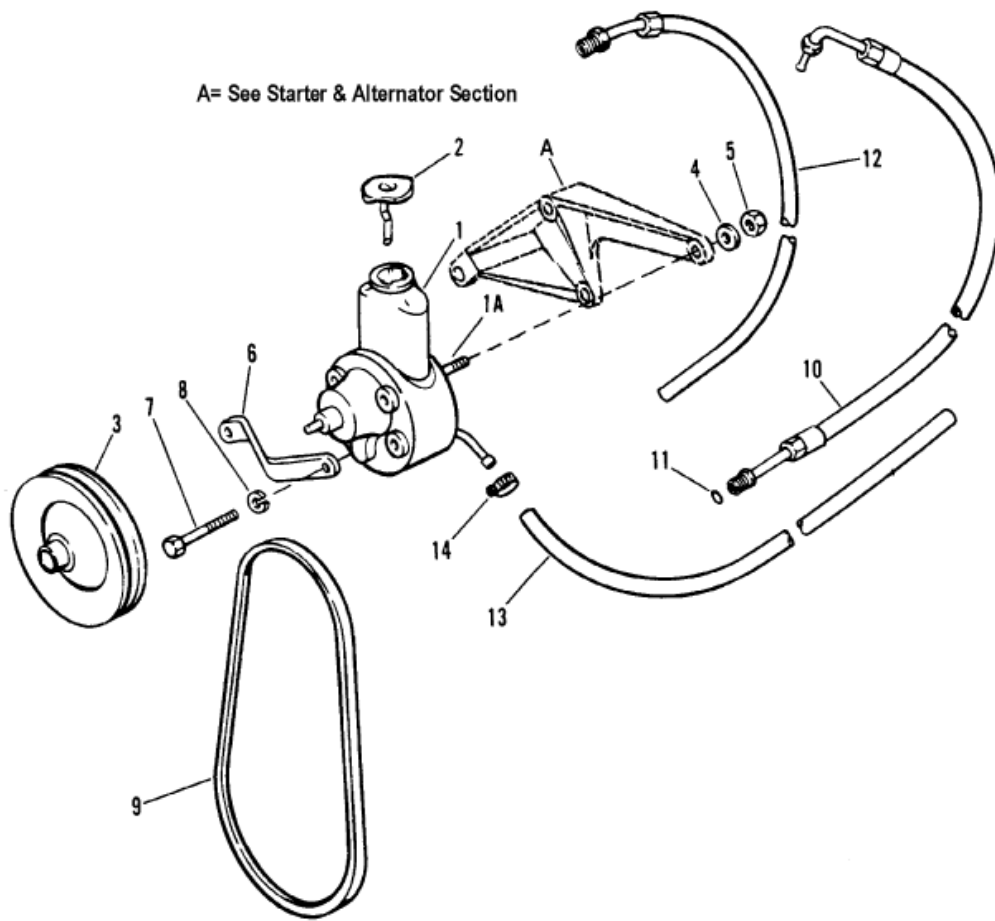

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		16792A 1	PUMP ASSEMBLY, POWER STEE	1		
1A	16	41877	STUD, POWER STEERING PUM	1		
2	36	95805	CAP, POWER STEERING PUMF	1		
3		73873A 1	PULLEY, POWER STEERING PI	1		
4	23	72057	SPACER, PUMP SCREW	2		
5	11	90517	NUT, MOUNTING STUD	2		
6		98813A 1	BRACE, PUMP MOUNTING	1		
7	10	40001188	SCREW, PUMP MOUNTING BRA	1		
8	13	40024 8	LOCKWASHER, BRACE SCREW	1		
9	57	96834T	V-BELT, POWER STEERING PUM	AR		
9	57	13458T	V-BELT, POWER STEERING PUM	AR		
10	32	90494	HOSE, PRESSURE (FITTINGS ON	1		
11	25	89879	"O" RING, PRESSURE HOSE EI	1		
12	32	98843 39	HOSE, RETURN (FITTINGS ON O	1		
13	32	52519 14	HOSE, PUMP TO OIL COOLER	1		
14	54	35830	CLAMP, HOSE ATTACHING	3		