



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		12675A	FLYWHEEL HOUSING	1		
2		88791	MOUNT, RUBBER - FLYWHEEL	2		
3	23	99322	SPACER, RUBBER MOUNT - FL	2		
4	10	37612	SCREW, FLYWHEEL HOUSING A	4		
4	10	64900	SCREW, FLYWHEEL HOUSING A	1		
5	16	64066	STUD, FLYWHEEL HOUSING AT	1		
6	11	32219	NUT, FLYWHEEL HOUSING ATT	1		
7	13	35048	LOCKWASHER, FLYWHEEL HOU	7		
8	12	20572	WASHER, FLYWHEEL HOUSING	1		
9	54	78945	"J" CLAMP, FLYWHEEL HOUSING	1		
9	54	92850	CLAMP	2		
10		13930A	COVER ASSEMBLY (USE WITH 1	1		
10		812600A	COVER ASSEMBLY (USE WITH 8	1		
11	27	96274	GASKET, FLYWHEEL HOUSING	1		4
12	10	32773	SCREW, COVER TO FLYWHEEL I	7		
13	84	62826A	WIRE, FLYWHEEL HOUSING STL	1		