



DISTRIBUTOR AND IGNITION COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A 3	DISTRIBUTOR ASSEMBLY	1		
2		16457A 4	CAP, DISTRIBUTOR	1		
3	10	90926	SCREW, DISTRIBUTOR CAP	4		
4	27	98242 1	GASKET, DISTRIBUTOR CAP	1		
5		13524A 5	ROTOR/SENSOR WHEEL	1		
8	87	91019A 3	SENSOR ASSEMBLY	1		
9	10	47618	SCREW, SENSOR	1		
10	12	27736	WASHER, SENSOR SCREW	2		
11	43	813776 1	GEAR DRIVE	1		
12	17	47617	PIN, DRIVE GEAR	1		
13	27	34486 3	GASKET, DISTRIBUTOR	1		
14		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
15	10	35169	SCREW, DISTRIBUTOR CLAMP	1		
17	13	26996	LOCKWASHER, DISTRIBUTOR T	2		
18	11	68219	NUT, DISTRIBUTOR TERMINAL	2		
20	84	813720A 2	SPARK PLUG WIRE KIT	1		
21	85	63709A 1	BOOT ASSEMBLY, SPARK PLUG	8		
22	33	59571	SPARK PLUG	8		
23		54676	RETAINER, HIGH TENSION LEAD	2		
24		32783	RETAINER, HIGH TENSION LEAD	2		
25		32784	RETAINER, HIGH TENSION LEAD	2		
26	392	7803A 4	COIL, IGNITION	1		
27		77294T	BRACKET, IGNITION COIL	1		
28	10	41408	SCREW, BRACKET (1-1/2")	1		
29	12	30164	WASHER, IGNITION COIL TERMINAL	2		
30	13	26996	LOCKWASHER, IGNITION COIL TERMINAL	2		
31	11	45076	NUT, IGNITION COIL TERMINAL	2		
32	10	59645	SCREW, IGNITION COIL (3/4")	2		
33	13	39107	LOCKWASHER, IGNITION COIL SCREW	2		
34	12	20084	WASHER, IGNITION COIL SCREW	2		
35	16	90096A 1	STUD ASSEMBLY	2		
36	54	72821	RETAINER WIRE	2		