



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	99418A2	STARTER MOTOR	1		
1		75666	HOUSING	1		
2	23	33369	BUSHING, DRIVE END HOUS	1		
3		33292	COLLAR, THRUST	1		
4	53	33290	RING, RETAINING - PINION ST	1		
5		33291	COLLAR, PINION STOP	1		
6		79205	DRIVE ASSEMBLY, CLUTCH	1		
7		79396	PLATE, BEARING	1		
8	23	71694	BUSHING, BEARING PLATE	1		
9	12	68614	WASHER, BEARING PLATE	1		
10	10	79209	SCREW, BEARING PLATE	2		
11		75665	ARMATURE	1		
12		N.S.S.	SHOE, POLE -FIELD COIL (DEL	4		
13		N.S.S.	SCREW, POLE SHOE TO FIELD	4		
14		N.S.S.	GROMMET, FIELD COIL (DELCC	1		
15		75664	FIELD COIL ASSEMBLY	1		
16	12	33258	WASHER, LEATHER - COMMUT	1		
17		79211	FRAME, COMMUTATOR END	1		
18		N.S.S.	BOLT, THRU (DELCO REMY #1	1		
19		N.S.S.	BOLT, THRU (DELCO REMY #1	1		
20		33284	HOLDER, INSULATED - FIELD F	2		
21		33283	HOLDER, FIELD FRAME BRUSH	2		
22		33270	BRUSH, FIELD FRAME	4		
23		N.S.S.	SCREW, BRUSH LEAD (DELCO	2		
24		N.S.S.	SCREW, BRUSH LEAD (DELCO	2		
25		33294	SUPPORT PACKAGE, GROUND	2		
26	24	33285	SPRING, FIELD FRAME BRUSH	4		
27		N.S.S.	PIN, DOWEL - FIELD FRAME (D	1		
28		71698	LEVER, SHIFT	1		
29		N.S.S.	STUD, SHIFT LEVER (DELCO R	1		
30	53	33354	RETAINING RING, STUD	1		
31		33317	PLUNGER, SHIFT LEVER	1		
32	17	79207	PIN, PLUNGER TO SHIFT LEVE	1		
33	24	46889	SPRING, PLUNGER RETURN	1		
		N.S.S.	SCREW, SOLENOID SWITCH (C	2		
		18080	SOLENOID SWITCH	1		