



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		861006A 1	HOUSING ASSEMBLY-THERMOS	1		
2	22	32803	PLUG-PIPE (3/8 IN.)	2		
3	27	806871	GASKET-THERMOSTAT	1		5
4	27	53045 1	GASKET-THERMOSTAT HOUSIN	1		5
5		807252 2	THERMOSTAT	1		
6	23	806922	SLEEVE	1		
7	10	861429	SCREW (3/8-16 X 1 IN.)	2		
8	32	807407	HOSE-THERMOSTAT HOUSING.	1		
9	32	807406 1	HOSE-COOLER TO COOLER	1		
10	32	808045	HOSE-FUEL COOLER TO TRANSI	1		
11	32	808044	HOSE-TRANSMISSION OIL COOL	1		
12	32	17435 79	HOSE-SEA WATER PUMP TO TR	1		
13	54	815504222	CLAMP	10		
14	32	89718 1	HOSE-THERMOSTAT HOUSING	1		
15	54	815504232	CLAMP	2		
16	32	97385 3	HOSE-THERMOSTAT HOUSING	1		
17	32	861318	HOSE-THERMOSTAT HOUSING	1		
18	54	815504220	CLAMP	4		
19	54	47715	CLIP	1		
20	10	35765A 1	SCREW & LOCKWASHER (5/16-1	1		
NS	19	807992 3	COVER-HOSE CLAMP END	AR		3.7
.	27	805396A92	GASKET SET-ENGINE OVERHAU	1	CONTENTS INDICATED BY FOO	