



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A50	PUMP ASSEMBLY-Water	1		
2	46	72774A40	BODY-Water Pump	1		
3		87631A 4	COVER ASSEMBLY-Water Pump	1		
4	27	805215 1	GASKET-Cover to Outer Wear	1		
5	22	32802	PLUG-Pipe (FOR WATER PUMP	1		
6	10	73275	SCREW (5/16-18 x 2-7/8")-Wate	2		
6	10	99347	SCREW (5/16-18 x 3-3/4")-Wate	3		
7		94916	WEAR PLATE-Outer	1		
8	27	94914	GASKET-Body to Wear Plate	2		
9	19	59504	PLUG-Impeller	1		
10	47	59362 1	IMPELLER (USE WITHOUT KEY)	1		
11	28	56662	KEY-Impeller Drive	1		
12		94576	WEAR PLATE-Inner	1		
13	25	94288	QUAD RING-Pump Housing	1		
14	46	94913A 2	HOUSING ASSEMBLY-Water Pu	1		
15	26	90562	SEAL-Oil-Water Pump Shaft	2		
16	30	72961	BEARING-Ball-Water Pump Sh	2		
17		59501A 1	SHAFT-Water Pump	1		
18	53	23720	RING-Retaining-Ball Bearing	1		
19	26	72785	SEAL-Oil-Water Pump Shaft	1		
20		47530	HUB-Water Pump Pulley	1		
21	12	20084	WASHER-Cover Screw	5		
22		52822T	PULLEY-Water Pump (CAST)	1		
23	10	47277	SCREW (5/16-24 x 3/4")-Pulley	4		
24	13	39107	LOCKWASHER (5/16")-Pulley Scre	4		
25	57	13457T	V BELT (30")-Water Pump	1		
26		15295T	BRACKET-Water Pump (STAMPEC	1		
27	10	47461	SCREW (7/16-14 x 1")-Water Pum	1		
28	10	17965	SCREW (7/16-14 x 45/64")-Water	1		
29	13	32993	LOCKWASHER (7/16")-Bracket Sc	1		
30	12	27025	WASHER-Bracket Screw	1		
32	13	39107	LOCKWASHER (5/16")	3		
33	11	21908	NUT (5/16-18)	3		
34		15751T	BRACE-Water Pump	1		
35	10	47461	SCREW (7/16-14 x 1")-Brace to Er	1		
36	13	32993	LOCKWASHER (7/16")-Brace Scre	1		
37	12	27025	WASHER-Brace Screw	1		
38	10	35786	SCREW (3/8-24 x 1")-Water Pump	1		
39	13	35048	LOCKWASHER (3/8")-Brace Scre	1		
40	11	46335	NUT (3/8-24)-Brace Screw	1		