



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	84	14338A	5 HARNESS ASSEMBLY-Wiring	1			
2		26079A	2 PLATE KIT	1			
3	10	15001	SCREW (#8-16 x 7/8")	4			
4		816470	3 BRACKET-Electrial Mount	1			
5	10	37612	SCREW (3/8-16 x 1-1/4")	2			
6	13	35048	LOCKWASHER (3/8")	3			
7	23	90523	SPACER	3			
8	88	11178	BREAKER-Circuit (50 AMP)	1			
9	13	26996	LOCKWASHER (#10)	2			
10	11	68219	NUT (10-32)	2			
11	10	45862	SCREW (10-32 x 7/8")	2			
12	11	61356	NUT (10-32)	2			
13	89	96054	SOLENOID-Starter	1			
14	10	98253	SCREW (1/4-20 x 1/2")	2			
15	84	79139A	16 WIRE ASSEMBLY (6") (RED)	1			
17	13	26992	LOCKWASHER (1/4")	2			
18	11	94330	NUT (1/4-20)	2			
19	13	26995	LOCKWASHER (#8)	2			
20	11	26419	NUT (8-32)	2			
21		13611	SENDER-Oil Temperature	1			
22		97257A	1 SENDER-Water Temperature	1			
22		49734A	1 SENDER-Water Temperature (Dual)	OPT.		3	
23		815425	SENDER-Oil Pressure	1			
23		37293	SENDER-Oil Pressure (Dual)	OPT.		3	
24	13	26996	LOCKWASHER (#10)	3			
25	11	45076	NUT (10-32)	3			
26	22	64013	REDUCER	1			
27	32	77690	WRAPPING	1			
28		17316A	2 IGNITION CONVERSION KIT	1			
29	10	49668	SCREW (1/4-20 x 3/4")	4			
30	13	21272	LOCKWASHER (1/4" Internal)	4			
31		816469	COIL	1			
32	10	49668	SCREW (1/4-20 x 3/4")	2			
33	12	29245	WASHER	2			
34	11	56374	NUT(1/4-20)	2			
35	11	68219	NUT(10-32)	2			
36	13	26996	LOCKWASHER (#10)	2			
37	22	36492	BUSHING-Reducer	1			