



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		90736A18	HOUSING ASSEMBLY-Thermostat	1		
2	23	47511	SLEEVE	1		
3	22	32803	PLUG-Pipe (3/8")	2		
4	27	53045 1	GASKET-Thermostat Housing	1		6
5		805273 1	THERMOSTAT (140 Deg.)	1		
6	27	47510	GASKET-Thermostat	1		6
7	23	47508	SLEEVE-Thermostat	1		
8	27	41812 2	GASKET-Thermostat Cover	1		6
9		47442A 1	COVER-Thermostat	1		
10	10	14164	SCREW (3/8-16 x 4-3/8")	2		
11	12	20553	WASHER	2		
12	22	98477A 2	VALVE ASSEMBLY	1		
13	32	816197	HOSE-Pump to Cooler	1	SERIAL 0C849992-0D725646	
13	32	821736	HOSE-Pump to Cooler	1	SERIAL 0D725647-0F213244	
14	54	18076 6	CLAMP	8		
15	32	17435 65	HOSE-Sea Pump to Drive Unit	1		
16	32	12818	HOSE-Oil Cooler to Oil Cooler	1		
17	22	13177	TUBE-Water Hose (NON POWER	1		
18	32	64346	HOSE-Oil Cooler to Thermostat Hou	1		
19	32	89718 1	HOSE-Thermostat Housing to Wate	1		
20	54	18076 8	CLAMP	2		
21	32	89749 1	HOSE-Thermostat Cover (PORT)	1		
22	32	89730 1	HOSE-Thermostat Cover (STBD)	1		
23	54	18076 4	CLAMP	8		
24	32	33220 70	HOSE (17") Cut as Req'd	2		
25		12552	LIFTING EYE	1		