



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		14746A 3	TRANSMISSION ASSEMBLY	1		
2	22	47629	ELBOW-Transmission to Oil Hose	2		
3	22	88517	ADAPTOR	1		
4		57758A 2	COUPLING ASSEMBLY-Engine t	1		
5	19	47463	PLUG-Expansion-Engine Coupli	1		
6	30	47470	BEARING-Ball-Engine Coupling	1		
7	53	47469	BEARING-Snap-Bearing to Engine	1		
8		98322A 2	TAILSTOCK ASSEMBLY-Bearing	1		
9		35852	MOUNT-Rubber-Tailstock	2		
10	26	47465	SEAL-Oil-Tailstock	1		
11	30	57762	BEARING-Ball-Tailstock (3-5/3)	1		
12	30	32537	BEARING-Ball-Tailstock (2-27/	1		
13	53	54481	RING-Snap-Bearing to Tailstock	1		
14	25	54067	SEAL-Tailstock	1		
15	27	47903	GASKET-Tailstock	1		
16	10	29081	SCREW (7/16-14 x 1-1/4")-Tail	6		
17	10	99524	SCREW (7/16-14 x 2")-Tailstock	2		
18	13	30381	LOCKWASHER (7/16" Hi-Collar)-	6		
19	13	32993	LOCKWASHER (7/16")-Tailstock	2		
20	16	99801	STUD-Clamp Block	1		
21		41058	CLAMP BLOCK-Shift Cable	2		
22	12	69056	WASHER-Clamp Block Stud	2		
23	11	35888	NUT (1/4-28)-Clamp Block Stud	1		
24	11	22339	NUT (5/8-18)-Tailstock to Transo	2		
25	10	47467	SCREW (5/8-18 x 5-1/2")-Tailsto	2		
26	12	47475	WASHER-Transom Plate Screws	2		
27	12	47466	WASHER-Transom Plate Screws	4		
28	13	34846	LOCKWASHER-Transom Plate S	2		
29	12	33171	WASHER-Transom Plate Screws	2		
30	32	47516 6	HOSE ASSEMBLY-Transmission to	2		
31		63832A 1	COOLER ASSEMBLY-Oil-Transmis:	1		
32	22	63835	ELBOW-Oil Cooler (45 Deg.)	1		
32	22	47629	ELBOW-Oil Cooler (90 Deg.)	1		
33		63820T 1	BRACKET-Oil Cooler (LONG)	1		
34		56328A 1	BRACKET-Oil Cooler (SHORT)	3		
35	10	60300	SCREW (1/4-28 x 3/4")-Oil Cooler	2		
36	11	30506	NUT (1/4-28)-Oil Cooler Bracket Sc	2		
37	10	35765A 1	SCREW (5/16-18 x 5/8")-Oil Cooler	1		