



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	50	17251A 3	STARTER ASSEMBLY	1	
1		79206	HOUSING ASSEMBLY	1	
2	23	33369	BUSHING-Drive End Housing	1	
3		814474	COLLAR-Thrust	1	
4	53	33290	RING-Retaining-Pinion Stop Colla	1	
5		33291	COLLAR-Pinion Stop	1	
6		68608	DRIVE ASSEMBLY-Clutch	1	
7		79396	PLATE-Bearing	1	
8	23	71694	BUSHING-Bearing Plate	1	
9	12	68614	WASHER-Bearing Plate	1	
10	10	79209	SCREW-Bearing	2	
11		68606	ARMATURE	1	
12		N. S. S.	SHOE-Pole Field Coil (Delco Rem	4	2
13		N. S. S.	SCREW (Delco Remy #1968396)	4	2
14		N. S. S.	GROMMET-Field Coil (Delco Rem	1	2
15		N. S. S.	FIELD COIL ASSY (Delco Remy	1	2
16		N. S. S.	WASHER-Leather (Delco Remy	1	2
17		79211	FRAME-Commutator End	1	
18		N. S. S.	BOLT-Thru (Delco Remy #19399	1	2
19		33284	HOLDER-Insulated-Field Frame B	2	
20		33283	HOLDER-Field Frame Brush Grou	2	
21		33270	BRUSH-Field Frame	4	
22		N. S. S.	SCREW-Brush Lead (Delco Remy	2	2
22		N. S. S.	SCREW-Brush Lead (Delco Remy	2	2
23		33294	SUPPORT	2	
24	24	33285	SPRING-Field Frame Brush	4	
25		N. S. S.	PIN-Dowel (Delco Remy #19856)	1	2
26		33297	LEVER-Shift	1	
27		N. S. S.	STUD-Shift Lever (Delco Remy #	1	2
28	12	68615	WASHER-Shift Lever Stud	1	
29	11	26484	NUT (5/16-18)-Shift Lever Stud	1	
30		33317	PLUNGER	1	
31	17	79207	PIN-Plunger to Shift Lever	1	
32	24	46889	SPRING-Plunger Return	1	
33		N. S. S.	SCREW-Solenoid (Delco Remy #	2	2
34	89	18080	SOLENOID	1	