



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	456	5327	CRANKSHAFT (SERIAL AND BEL	1	SERIAL 00000000-04625579	
1	456	6092	CRANKSHAFT (SERIAL AND UP	1	SERIAL 04625580-09999999	
2		68700	SPROCKET, CRANKSHAFT	1		
3	28	67382	KEY, SPROCKET AND ALTERNA	2		
4	398	6231A 2	STATOR ASSEMBLY, ALTERNAT	1	SERIAL 00000000-04625579	
5	10	52034	SCREW, STATOR TO FRONT CO	5	SERIAL 00000000-04625579	
6	13	26996	LOCKWASHER, STATOR TO COV	5	SERIAL 00000000-04625579	
4	398	6231A 5	STATOR ASSEMBLY, ALTERNAT	1	SERIAL 04625580-05120244	
5	10	77363	SCREW, STATOR TO FRONT CO	5	SERIAL 04625580-05120244	
6	13	26996	LOCKWASHER, STATOR TO COV	5	SERIAL 04625580-05120244	
4	398	6231A 6	STATOR ASSEMBLY, ALTERNAT	1	SERIAL 05120245-09999999	
5	10	77363	SCREW, STATOR TO FRONT CO	5	SERIAL 05120245-09999999	
6	13	26996	LOCKWASHER, STATOR TO COV	5	SERIAL 05120245-09999999	
7	54	73667	"J" CLIP, ALTERNATOR LEAD AT	1		
8		70902A	ALTERNATOR ASS'Y, FLYWHEE	1	SERIAL 00000000-04625579	
8		77180A	ALTERNATOR ASS'Y, FLYWHEE	1	SERIAL 04625580-09999999	
9	10	59644	SCREW, ALTERNATOR ASSEMB	1		
10	12	36103	WASHER, ALTERNATOR ASSEMB	1		
11	251	6101	FLYWHEEL	1		
12	16	32808	STUD, FLYWHEEL TO COUPLING	6		
13		69354A	COUPLING ASSEMBLY	1		
14	12	32648	WASHER, FLYWHEEL TO COUPL	6		
15	11	34933	NUT, FLYWHEEL TO COUPLING	6		
16	10	74335	SCREW, MAIN BEARING CAPS	10		
17		68750	SEAL, REAR BEARING CAP	2		
18		74313A 1	MAIN BEARING ASSEMBLY (STD	4	WHEN ORDERING REPLACEME	
18		74313A 2	MAIN BEARING ASSEMBLY (.002	AR	WHEN ORDERING REPLACEME	
18		74313A 3	MAIN BEARING ASSEMBLY (.020	AR	WHEN ORDERING REPLACEME	
19		74314A 1	CENTER MAIN BEARING ASS'Y (1	WHEN ORDERING REPLACEME	
19		74314A 3	CENTER MAIN BEARING ASS'Y (AR	WHEN ORDERING REPLACEME	
19		74314A 3	CENTER MAIN BEARING ASS'Y (AR	WHEN ORDERING REPLACEME	