



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		76328A 2	INTAKE MANIFOLD ASSEMBLY	1		
2	22	36382	PLUG, INTAKE MANIFOLD-TOP	1		
3	16	70236	STUD CARBURETOR TO MANIF	4		
3A	10	28642	SCREW, DRIVE - WATER TUBE	2		
4	27	70905	GASKET, INTAKE MANIFOLD	1		2
5	27	70143	GASKET, MANIFOLD TO CARBUF	1		2
6	10	68101	SCREW, INTAKE MANIFOLD TO I	7		
7	12	25909	WASHER, INTAKE MANIFOLD SC	7		
8		72481	LEVER, INTERMEDIATE THROTT	1	SERIAL 00000000-04886619	
8		78801	LEVER, INTERMEDIATE THROTT	1	SERIAL 04886620-09999999	
9	12	35950	WASHER, INTERMEDIATE THRC	1		
10	12	30164	WASHER, INTERMEDIATE THRC	1		
11	11	20110	NUT, INTERMEDIATE THROTTLE	1		
12	10	38507	SCREW, LEVVER TO INTAKE MA	1		
13	12	20553	WASHER, LEVER TO INTAKE MA	1		
14	12	57792	WASHER, LEVER TO INTAKE MA	1		
15		27947	SWIVEL, LINKAGE	1		
16		64804	LINK ROD, LINKAGE	1		
17		63145A 1	LINK ROD ASSEMBLY, LINKAGE	1		
18		38983	SWIVEL, LINKAGE-CARBURETOR	1		
19	12	35950	WASHER, SWIVEL LINKAGE-CAF	1		
20	12	30164	WASHER, SWIVEL LINKAGE-CAF	1		
21	11	20110	NUT, SWIVEL LINKAGE - CARBU	1		
22	16	38525	STUD, THROTTLE CABLE ANCH	1		
23	12	24664	WASHER, THROTTLE CABLE AN	2		
24	11	20664	NUT, THROTTLE CABLE ANCHO	1		
25	10	64969	SCREW, THROTTLE STOP	1		
26	11	33122	NUT, THROTTLE STOP SCREW	1		
27	32	75317	HOSE, MANIFOLD TO WATER PL	1	SERIAL 00000000-04487700	
27	32	76326	HOSE, MANIFOLD TO WATER PL	1	SERIAL 04487701-09999999	
28	54	32780	CLAMP, HOSE TO WATER PUMP	1		
29	54	32781	CLAMP, HOSE TO INTAKE MANIF	1		
30	32	75318	HOSE, INTAKE MAN. TO EXH. MA	1	SERIAL 00000000-04487700	
30	32	76327	HOSE, INTAKE MAN. TO EXH. MA	1	SERIAL 04487701-09999999	
31	54	32781	CLAMP, HOSE TO INTAKE MANIF	1		
32	54	32780	CLAMP, HOSE TO INTAKE MANIF	1		
-	27	74264A 1	ENGINE GASKET SET	1		