



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		70960A	FLYWHEEL HOUSING ASSEMBLY	1		
2	23	46742	SPACER, RUBBER MOUNT	2		
3		33149	MOUNT, RUBBER	2		
4	10	37612	SCREW, FLYWHEEL HOUSING A	6		
5	13	37459	LOCKWASHER, FLYWHEEL HOUSING	6		
6		72100	COVER, FLYWHEEL HOUSING	1		
7	10	26065	SCREW, COVER TO FLYWHEEL HOUSING	1		
8	10	47277	SCREW, COVER TO FLYWHEEL HOUSING	3		
9	11	29250	NUT, COVER TO FLYWHEEL HOUSING	4		
10	54	61001	CLAMP, SHIFT CABLE ATTACHMENT	1		
11		45915	TERMINAL BLOCK	1		
12	10	20189	SCREW, TERMINAL BLOCK TO FLYWHEEL HOUSING	1		
13	11	27164	NUT, TERMINAL BLOCK TO FLYWHEEL HOUSING	1		
14	10	62568	SCREW, LEAD ATTACHING TO TERMINAL BLOCK	1		
15		72757	BRACKET, CIRCUIT BREAKER	1		
16	10	28668	SCREW, CIRCUIT BREAKER BRACKET TO HOUSING	2		
17	11	56374	NUT, CIRCUIT BREAKER BRACKET TO HOUSING	2		
18	88	65093	CIRCUIT BREAKER	1	SERIAL 00000000-04625579	
18	88	78813	CIRCUIT BREAKER	1	SERIAL 04625580-09999999	
19	10	24637	SCREW, CIRCUIT BREAKER TO BRACKET	2		
20	12	30164	WASHER, CIRCUIT BREAKER TO BRACKET	2		
21	11	46438	NUT, CIRCUIT BREAKER TO BRACKET	2		
22	11	68219	NUT, CIRCUIT BREAKER TERMINAL BLOCK	2		
23	13	26996	LOCKWASHER, CIRCUIT BREAKER TERMINAL BLOCK	2		