



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	72550	STARTER ASSEMBLY	1		
2	10	72875	SCREW, STARTER ATTACHING	2		
3	12	34931	WASHER, STARTER STUD	1		
4	11	23161	NUT, STARTER STUD	1		
5	13	26993	LOCKWASHER, STARTER TERM	1		
6	11	29250	NUT, STARTER TERMINAL	1		
7		70398	BRACE, STARTER TO CYLINDER	1		
8	10	21077	SCREW, STARTER BRACE TO C	2		
9	12	34931	WASHER, STARTER BRACE SCF	2		
10	13	35048	LOCKWASHER, STARTER BRACI	1		
11		65057	STARTER SOLENOID	2		
12	10	28635	SCREW, SOLENOID TO CYLINDE	2		
13	13	26992	LOCKWASHER, SOLENOID TO C	1		
14		26901	BUMPER, SOLENOID	1		
15	13	26996	LOCKWASHER, SOLENOID TERM	2		
16	11	68219	NUT, SOLENOID TERMINAL (#10	2		
17	13	26993	LOCKWASHER, SOLENOID TERM	2		
18	11	20083	NUT, SOLENOID TERMINAL (5/11	1		
19		59646	CABLE, SOLENOID TO STARTER	1		
20	84	73153A 1	WIRING HARNESS	1		
21		26079	PLATE, HARNESS ATTACHING	1		
22	10	46718	SCREW, PLATE TO BRACKET (3/	4		
23	54	64235 1	"J" CLIP, WIRING HARNESS	1		
24	10	20031	SCREW, WIRING HARNESS CLAI	1		
25	13	26992	LOCKWASHER, WIRING HARNE	1		
26	54	73668	"J" CLIP, WIRING HARNESS TO I	3		
27	10	26801	SCREW, CLIP TO INTAKE MANIFI	3		
28	88	79023A55	FUSE ASSY, SOLENOID (55 AMP	1	SERIAL 04886620-05064928	
28	88	79023A90	FUSE ASSY, SOLENOID (90 AMF	1	SERIAL 05064929-09999999	
29	10	24234	SCREW, CABLE TO FUSE ATTAC	1	SERIAL 04886620-09999999	
30	13	39107	LOCKWASHER, CABLE TO FUSE	1	SERIAL 04886620-09999999	
31	11	21908	NUT, CABLE ATTACHING SCREW	1	SERIAL 04886620-09999999	
32		34623	SENDING UNIT, OIL PRESSURE	1		
33		38559	SWITCH, OIL PRESSURE	1	SERIAL 00000000-04625579	
34	11	68219	NUT, SWITCH AND SENDING UN	2	SERIAL 00000000-04625579	
35	13	26996	LOCKWASHER, SWITCH AND SE	2	SERIAL 00000000-04625579	
36	84	79139A 5	JUMPER WIRE, 90 AMP FUSE	1	SERIAL 05064929-09999999	
37	85	79695	BOOT, INSULATOR-FUSE STUD	1	SERIAL 04886620-09999999	
38	13	26992	LOCKWASHER, FUSE STUD	1	SERIAL 04886620-09999999	
39	11	29598	NUT, FUSE STUD	1	SERIAL 04886620-09999999	