



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		71527A 9	EXHAUST MANIFOLD ASSEMBLY	1		
2	22	33198A 1	PLUG,CORE (3/4-14)	3		
3	22	36382	PLUG,DRIAN (1/4-18)	1		
4	16	49545	STUD,MANIFOLD TO ELBOW (1/4-18)	2		
5	10	72094	SCREW,ELBOW TO MANIFOLD	2		
6	16	71494	STUD,EXHAUST MANIFOLD TO THERM	1		
7	16	77958	STUD,EXHAUST MANIFOLD TO THERM	1		
8	10	36355	SCREW,EXHAUST MANIFOLD TO THERM	6		
9	13	35048	LOCKWASHER,EXHAUST MANIFOLD ATTACH	8		
10	11	32219	NUT,EXHAUST MANIFOLD ATTACH	2		
11	27	68715	GASKET,EXHAUST MANIFOLD ATTACH	1		1
12		71943	END CAP,REAR	1		
13	27	48043	GASKET,END CAP 1	1		1
14	10	35386	SCREW,ENDCAP TO EXHAUST MANIFOLD	3		
14	10	20362	SCREW,END CAP TO EXHAUST MANIFOLD	1		
15	22	75188	FITTING,END CAP-BY-PASS HOSE	1		
16		74009	THERMOSAT HOUSING	1		
17	22	32803	PLUG, THERMOSTAT HOUSING	1		
18		75669	SENDER,WATER TEMPERATURE	1		
19	27	48043	GASKET,THERMOSTAT HOUSING	1		1
20	10	74822	SCREW, THERMOSTAT HOUSING	4		
21	12	36533	WASHER,COPPER-THERMOSTAT HOUSING	4		
22		76270	THERMOSTAT	1		
23	27	74830	GASKET,THERMOSTAT HOUSING	1		1
24		74144A 2	ASSEMBLY	1		
25	22	74033	ELBOW, OVERFLOW	1		
26	22	58471	BASE,FILLER HOLE CAP	1		
27	25	45257	"O"RING, FILLER BASE	1		1
28	27	71614	GASKET, FILLER HOLE CAP	1		
29	36	55143	CAP,FILLER HOLE	1		
30	22	76170	ELBOW, RESERVOIR BY-PASS	1		
31	54	64235 1	CLAMP, HOSE TO VALVE COVER	1		
32	32	89713	HOSE,BY-PASS- RESERVOIR TO THERM	1		
33	54	75826	CLAMP,BY-PASS HOSE ATTACHMENT	2		
34	10	74826	SCREW, RESERVOIR TO THERM	2		
35	10	53016	SCREW,RESERVOIR TO THERM	2		
36	13	39107	LOCKWASHER,RESERVOIR ATTACHMENT	4		
37	12	53705	WASHER,RESERVOIR ATTACHMENT	4		
38		76325A 2	EXHAUST ELBOW ASSEMBLY	1		
39	22	33198A 1	PLUG, CORE (3/4-14)	4		
40	22	33198A 1	PLUG,CORE (1/8-22)	1		