



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		71527A 9	EXHAUST MANIFOLD ASSEMBLY	1	
2	22	33198A 1	PLUG,CORE (3/4-14)	3	
3	22	36382	PLUG, DRAIN (1/4-18)	1	
4	16	64282	STUD,MANIFOLD TO ELBOW (2	2	
5	10	35785	SCREW,MANIFOLD TO ELBOW	2	
6	16	71494	STUD,EXHAUST MANIFOLD TO F	1	
7	16	76225	STUD,EXHAUST MANIFOLD TO F	1	
8	10	36355	SCREW,EXHAUST MANIFOLD TC	5	
8	10	76770	SCREW,EXHAUST MANIFOLD TC	1	
9	13	35048	LOCKWASHER,EXHAUST MANIF	8	
10	11	32219	NUT,EXHAUST AMNIFOLD ATTA	2	
11	27	68715	GASKET,EXHAUST MANIFOLD TI	1	1
12		73813A 1	END CAP ASSEMBLY,REAR	1	
13	27	73814	GASKET,END CAP	1	1
14	10	25299	SCREW,END CAP TO EXHAUST I	4	
15		74009	THERMOSTAT HOUSING	1	
16	22	32803	PLUG,THERMOSTAT HOUSING	1	
17		75669	SENDER,WATER TEMPERATUR	1	
18	27	48043	GASKET,THERMOSTAT HOUSING	1	1
19	10	74822	SCREW,THERMOSTAT HOUSING	4	
20	12	36533	WASHER,COPPER-THERMOSTA	4	
21		76270	THERMOSTAT	1	
22	27	74830	GASKET,THERMOSTAT HOUSING	1	1
23		78040A 2	RESERVOIR ASSEMBLY	1	
24	22	74033	ELBOW,OVERFLOW	1	
25	22	58471	BASE,FILLER HOLE CAP	1	
26	25	45257	"O"RING,FILLER BASE	1	1
27	27	71614	GASKET,FILLER HOLE CAP	1	
28	36	55143	CAP,FILLER HOLE	1	
29	22	76170	ELBOW,RESERVOIR BY-PASS	1	
30	54	64235 1	CLAMP,HOSE TO VALVE COVER	1	
31	32	92715	HOSE,BY-PASS-RESERVOIR TO I	1	
32	54	75826	CLAMP,HOSE ATTACHING	2	
33	10	57841	SCREW,RESERVOIR TO THERM	2	
34	10	53016	SCREW,RESERVOIR TO THERM	2	
35	13	39107	LOCKWASHER,RESERVOIR ATT.	4	
36	12	53705	WASHER,RESERVOIR ATTACHIN	4	
37		77936A 1	WATER DISTRIBUTION HOUSING	1	
38	23	47511	SLEEVE,WATER DISTRIBUTION	1	
39	22	76170	ELBOW,WATER DISTRIBUTION	1	
40		76271A 2	EXHAUST ELBOW ASSEMBLY	1	